

---

 
DIGITAL KEYBOARD

# OWNER'S MANUAL

---

— **PSR-E273**

— **YPT-270**

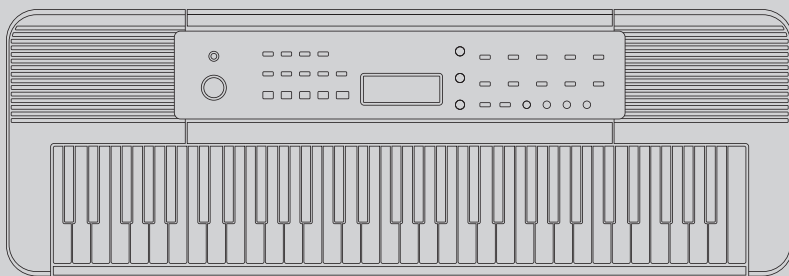

Before using the instrument, be sure to read  
“PRECAUTIONS” on pages 5–7.



## FCC INFORMATION (U.S.A.)

### 1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

### 2. IMPORTANT:

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

### 3. NOTE:

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other elec-

tronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA 90620

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

\* This applies only to products distributed by Yamaha Corporation of America.

(class B)

## COMPLIANCE INFORMATION STATEMENT (Supplier's declaration of conformity procedure)

Responsible Party : Yamaha Corporation of America

Address : 6600 Orangethorpe Ave., Buena Park, Calif. 90620

Telephone : 714-522-9011

Type of Equipment : Digital Keyboard

Model Name : PSR-E273/YPT-270

This device complies with Part 15 of the FCC Rules.

 
Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received including interference that may cause undesired operation.

\* This applies only to products distributed by Yamaha Corporation of America.

(FCC SDoC)

## For AC adaptor

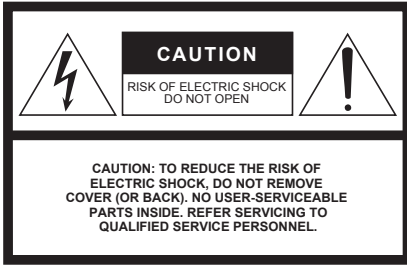

### Explanation of Graphical Symbols



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

# IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



### WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

(UL60065\_03)



# PRECAUTIONS

## PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe and handy place for future reference.

### For the AC adaptor



#### **WARNING**

- This AC adaptor is designed for use with only Yamaha electronic instruments. Do not use for any other purpose.
- Indoor use only. Do not use in any wet environments.



#### **CAUTION**

- When setting up, make sure that the AC outlet is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch of the instrument and disconnect the AC adaptor from the outlet. When the AC adaptor is connected to the AC outlet, keep in mind that electricity is flowing at the minimum level, even if the power switch is turned off. When you are not using the instrument for a long time, make sure to unplug the power cord from the wall AC outlet.

### For this instrument



#### **WARNING**

**Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:**

#### **Power supply/AC adaptor**

- Do not place the power cord near heat sources such as heaters or radiators. Also, do not excessively bend or otherwise damage the cord, or place heavy objects on it.
- Only use the voltage specified as correct for the instrument. The required voltage is printed on the name plate of the instrument.
- Use the specified adaptor (page 24) only. Using the wrong adaptor can result in damage to the instrument or overheating.
- Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.

#### **Do not open**

- This instrument contains no user-serviceable parts. Do not open the instrument or attempt to disassemble or modify the internal components in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

#### **Water warning**

- Do not expose the instrument to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the instrument, turn off the power immediately and unplug the power cord from the AC outlet. Then have the instrument inspected by qualified Yamaha service personnel.
- Never insert or remove an electric plug with wet hands.

#### **Fire warning**

- Do not put burning items, such as candles, on the unit. A burning item may fall over and cause a fire.

#### **Battery**

- Follow the precautions below. Failure to do so might result in explosion, fire, overheating or battery fluid leakage.
  - Do not tamper with or disassemble batteries.
  - Do not dispose of batteries in fire.

- Do not attempt to recharge batteries that are not designed to be charged.
- Keep the batteries separate from metallic objects such as necklaces, hairpins, coins, and keys.
- Use the specified battery type (page 24) only.
- Use new batteries, all of which are the same type, same model, and made by the same manufacturer.
- Always make sure all batteries are inserted in conformity with the +/- polarity markings.
- When the batteries run out, or if the instrument is not to be used for a long time, remove the batteries from the instrument.
- When using Ni-MH batteries, follow the instructions that came with the batteries. Use only the specified charger device when charging.
- Keep batteries away from small children who might accidentally swallow them.

- If the batteries do leak, avoid contact with the leaked fluid. If the battery fluid should come in contact with your eyes, mouth, or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause loss of sight or chemical burns.

### If you notice any abnormality

- When one of the following problems occur, immediately turn off the power switch and disconnect the electric plug from the outlet. (If you are using batteries, remove all batteries from the instrument.) Then have the device inspected by Yamaha service personnel.
  - The power cord or plug becomes frayed or damaged.
  - It emits unusual smells or smoke.
  - Some object has been dropped into the instrument.
  - There is a sudden loss of sound during use of the instrument.
  - If any cracks or breakages exist on the instrument.



## CAUTION

**Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the instrument or other property. These precautions include, but are not limited to, the following:**

### Power supply/AC adaptor

- Do not connect the instrument to an electrical outlet using a multiple-connector. Doing so can result in lower sound quality, or possibly cause overheating in the outlet.
- When removing the electric plug from the instrument or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.
- Remove the electric plug from the outlet when the instrument is not to be used for extended periods of time, or during electrical storms.

### Location

- Do not place the instrument in an unstable position where it might accidentally fall over.
- Before moving the instrument, remove all connected cables, to prevent damage to the cables or injury to anyone who might trip over them.
- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, electricity is still flowing to the product at the minimum level. When you are not using the product for a long time, make sure to unplug the power cord from the wall AC outlet.

- Use only the stand specified for the instrument. When attaching it, use the provided screws only. Failure to do so could cause damage to the internal components or result in the instrument falling over.

### Connections

 
- Before connecting the instrument to other electronic components, turn off the power for all components. Before turning the power on or off for all components, set all volume levels to minimum.
- Be sure to set the volumes of all components at their minimum levels and gradually raise the volume controls while playing the instrument to set the desired listening level.

### Handling caution

- Do not insert a finger or hand in any gaps on the instrument.
- Never insert or drop paper, metallic, or other objects into the gaps on the panel or keyboard. This could cause physical injury to you or others, damage to the instrument or other property, or operational failure.
- Do not rest your weight on, or place heavy objects on the instrument, and do not use excessive force on the buttons, switches or connectors.
- Do not use the instrument or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the instrument, or data that is lost or destroyed.

Always turn the power off when the instrument is not in use.

Even when the [  ] (Standby/On) switch is in standby status (display is off), electricity is still flowing to the instrument at the minimum level.

When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

Make sure to discard used batteries according to local regulations.

## DMI-7 3/3

### NOTICE

To avoid the possibility of malfunction/ damage to the product, damage to data, or damage to other property, follow the notices below.

#### ■ Handling

- Do not use the instrument in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Otherwise, the instrument, TV, or radio may generate noise. When you use the instrument along with an application on your smart device such as a smartphone or tablet, we recommend that you enable "Airplane Mode" on that device in order to avoid noise caused by communication.
- Do not expose the instrument to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel disfiguration, damage to the internal components or unstable operation. (Verified operating temperature range: 5° – 40°C, or 41° – 104°F.)
- Do not place vinyl, plastic or rubber objects on the instrument, since this might discolor the panel or keyboard.
- Do not press the LCD screen with your finger because it is a sensitive, precision-made part. Doing so might cause an appearance abnormality, such as a stripe on the LCD, although this abnormality should disappear again within a short time.

#### ■ Maintenance

- When cleaning the instrument, use a soft and dry cloth. Do not use paint thinners, solvents, alcohol, cleaning fluids, or chemical-impregnated wiping cloths.

#### ■ Saving data

- Some of the data of this instrument (page 23) are retained when the power is turned off. However, the saved data may be lost due to some failure, an operation mistake, etc.

### Information

#### ■ About copyrights

- Copying of the commercially available musical data including but not limited to MIDI data and/or audio data is strictly prohibited except for your personal use.
- This product incorporates and bundles contents in which Yamaha owns copyrights or with respect to which Yamaha has license to use others' copyrights. Due to copyright laws and other relevant laws, you are NOT allowed to distribute media in which these contents are saved or recorded and remain virtually the same or very similar to those in the product.
  - \* The contents described above include a computer program, Accompaniment Style data, MIDI data, WAVE data, voice recording data, a score, score data, etc.
  - \* You are allowed to distribute medium in which your performance or music production using these contents is recorded, and the permission of Yamaha Corporation is not required in such cases.

#### ■ About functions/data bundled with the instrument

- Some of the preset songs have been edited for length or arrangement, and may not be exactly the same as the original.

#### ■ About this manual

- The illustrations and LCD screens as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your instrument.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

The model number, serial number, power requirements, etc., may be found on or near the name plate, which is at the bottom of the unit. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase to aid identification in the event of theft.

**Model No.**

---

**Serial No.**

---

(bottom\_en\_01)

**Thank you for purchasing this Yamaha Digital Keyboard!**

**This instrument is loaded with various sounds, preset Songs and may convenient functions—so that even beginners can enjoy playing it right away.**

**We recommend that you read this manual carefully so that you can fully take advantage of the advanced and convenient functions of the instrument.**

**We also recommend that you keep this manual in a safe and handy place for future reference.**

## About the Manuals

---

### ■ Included Document



**Owner's Manual (this book)**

### ■ Online Materials (Downloadable from the Web)



#### **Drum Kit List**

This contains detailed information of the Drum Kit Voices (Voice No. 117-124, 378-386; pages 26–28). When selecting these Voices, various drum, percussion and SFX sounds listed here are assigned to each key.

To obtain these manuals, access the Yamaha Downloads, enter the model name for searching the desired files.

**Yamaha Downloads:** <https://download.yamaha.com>



#### **SONG BOOK**

This contains music scores for the preset Songs (excluding the Demo Songs) of this instrument.

To obtain this SONG BOOK, access the Yamaha website and download it from the product web page.

**Yamaha Global Site:** <https://www.yamaha.com>

### ■ Video Manual

Special video manuals are available that explain how to use this product, letting you see and hear how to enjoy playing with “Style” etc.



Scan the QR code at left or access the website below.

**[https://www.yamaha.com/2/portable\\_keyboards/](https://www.yamaha.com/2/portable_keyboards/)**

\*If subtitles for your own language are not displayed, set them with the “Subtitles/closed captions (c)” and “Settings” buttons at the lower right on the YouTube screen.



“Settings” button (Sets language of the subtitles etc.)

“Subtitles/closed captions (c)” button (Switches the subtitle display on/off.)

## Included Accessories

---

- Owner's Manual (this book)
- Music rest
- Online Member Product Registration
- AC adaptor
  - \* May not be included depending on your area. Check with your Yamaha dealer.

# Contents

About the Manuals .....	8	<b>Try the Quiz - and Guess the Sound!</b>	<b>19</b>
Included Accessories .....	8	<b>Recording Your Performance (Phrase Recording)</b>	<b>19</b>
<b>Setting Up</b>		<b>Connecting to Other Devices</b>	<b>20</b>
<b>Setting Up</b>	<b>10</b>	Playing an External Audio Devices, such as a Smartphone, with the Built-in Speakers.....	20
Power Requirements .....	10	Connecting Headphones or.....	20
Turning the Power On.....	11	External Speakers .....	20
Auto Power Off function .....	11	Using a Pedal (Sustain) .....	20
Using the Music Rest .....	11	<b>The Functions</b>	<b>21</b>
<b>Panel Controls and Terminals</b>	<b>12</b>	<b>Troubleshooting</b>	<b>24</b>
Display Items .....	14	<b>Specifications</b>	<b>24</b>
How to Select a Voice/Song/Style .....	14	<b>Index</b>	<b>25</b>
<b>Reference</b>		<b>Appendix</b>	
<b>Playing the Keyboard</b>	<b>15</b>	Voice List.....	26
Playing a Variety of Instrument Voices .....	15	SFX Kit List .....	29
Playing the Keyboard with Two Persons (Duo mode).....	15	Style List.....	30
<b>Playing and Practice Songs</b>	<b>16</b>	Song List .....	31
Playing Songs.....	16	Effect Type List.....	32
Using the Song Lesson Feature .....	16	Smart Chord Chart .....	33
<b>Playing Rhythm and Accompaniment (Style)</b>	<b>17</b>		
How to Play Chords when Playing the Style (Fingering Type).....	18		

## Information for users on collection and disposal of old equipment and used batteries:



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation.



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

### For business users in the European Union:

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



### Information on Disposal in other Countries outside the European Union:

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the EU Battery Directive for the chemical involved.

Cd

(weee\_battery\_eu\_en\_02)

 
# Setting Up

## Power Requirements

Although the instrument will run either from an AC adaptor or batteries, Yamaha recommends use of an AC adaptor whenever possible. An AC adaptor is more environmentally friendly than batteries and does not deplete resources.

### ■ Using an AC Adaptor

Connect the AC adaptor in the order shown in the illustration.

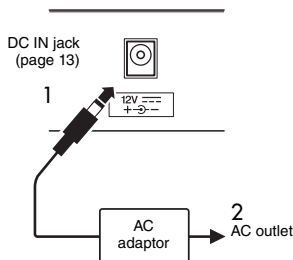


#### ⚠ WARNING

- Use the specified AC adaptor (page 24) only. Using the wrong AC adaptor can result in damage to the instrument or overheating.

#### ⚠ WARNING

 - When using the AC adaptor with a removable plug, make sure to keep the plug attached to the AC adaptor. Using the plug alone can cause electric shock or fire.
- If the plug is accidentally removed from the AC adaptor, slide it back in until it clicks into place, taking care to avoid touching any internal metal parts. To avoid electric shock, short circuit or damage, also be careful that there is no dust between the AC adaptor and plug.

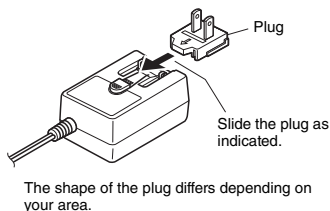

#### ⚠ CAUTION

- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn the power off and disconnect the plug from the outlet.

#### NOTE

- Follow the order shown above in reverse when disconnecting the AC adaptor.

 
### ■ Using Batteries

This instrument requires six "AA" size, Alkaline (LR6)/Manganese (R6) batteries, or rechargeable nickel-metal hydride batteries (rechargeable Ni-MH batteries). The Alkaline batteries or rechargeable Ni-MH batteries are recommended for this instrument, since other types may result in poorer battery performance.


#### ⚠ WARNING

- When the batteries run out, or if the instrument is not to be used for a long time, remove the batteries from the instrument.

- 1 Make sure that the power of the instrument is off.
- 2 Open the battery compartment cover located on the instrument's bottom panel.

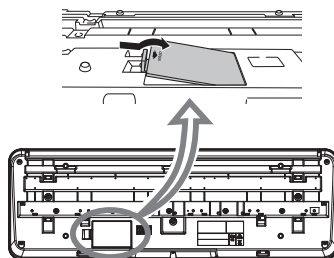

 - 3 Insert the six new batteries, being careful to follow the polarity markings on the inside of the compartment.

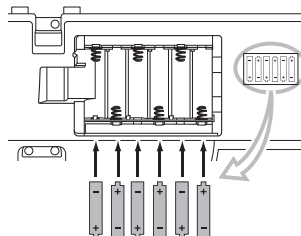

- 4 Replace the compartment cover, making sure that it locks firmly in place.

Make sure to set the battery type correctly (page 11).

#### NOTICE

- Connecting or disconnecting the power adaptor with batteries installed may turn the power off, resulting in loss of data being recorded at the time.
- When battery power becomes too low for proper operation, the volume may be reduced, the sound may be distorted, and other problems may occur. When this happens, make sure to replace all batteries with new ones or already recharged ones.

**NOTE**

- This instrument cannot charge the batteries. Use only the specified charger device when charging.
- Power will be automatically drawn from the AC adaptor if an AC adaptor is connected while batteries are installed in the instrument.

**■ Setting the battery type**

 
Depending on the battery type to be used, you may need to change the battery type setting on this instrument. Alkaline (and manganese) batteries are chosen by default. After installing new batteries and turning the power on, make sure to set the Battery Type appropriately (rechargeable or not) via Function Type number 027 (page 23).

**NOTICE**

- Failure to set the battery type may shorten the amount of the battery life. Make sure to set the battery type correctly.

**Turning the Power On**

- 1 Turn down the [MASTER VOLUME] dial to "MIN."

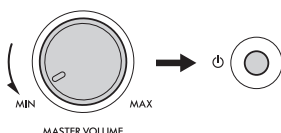

- 2 Press the [⏻] (Standby/On) switch to turn the power on. The Voice name appears on the display. Adjust the volume as desired while playing the keyboard.
- 3 Press and hold the [⏻] (Standby/On) switch for about a second to set the instrument to standby mode.

**⚠ CAUTION**

- Even when the [⏻] (Standby/On) switch is in standby status, electricity is still flowing to the product at the minimum level. Remove the electric plug from the outlet when the instrument is not to be used for extended periods of time, or during electrical storms.

**NOTICE**

 
- Press only the [⏻] (Standby/On) switch when turning the power on. Any other operations such as pressing the pedal are not allowed. Doing so may cause the instrument to malfunction.

**Auto Power Off function**

To prevent unnecessary power consumption, this instrument features an Auto Power Off function that automatically turns the power off if the instrument is not operated for approximately 30 minutes by default; however, you can change this setting (Function Number 026; page 23).


**■ To disable the Auto Power Off function:**

Turn the power on while holding down the lowest key on the keyboard. A message "oFF AutoOff" appears briefly, then the instrument starts up with the Auto Power Off function disabled.

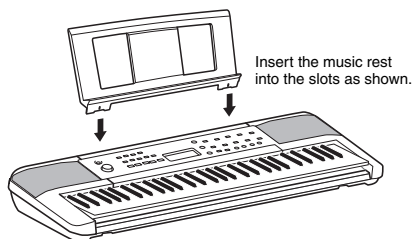**Using the Music Rest**

# Panel Controls and Terminals
 
## ■ Front Panel

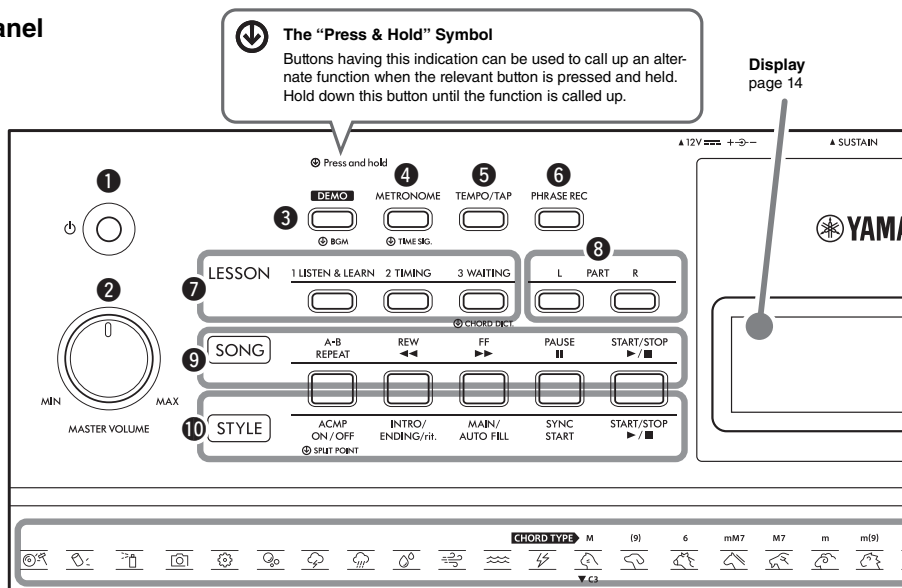

**1 [ ] (Standby/On) Switch** ..... page 11  
Turns the instrument's power on or off.

**2 [MASTER VOLUME] dial**..... page 11  
Adjusts the overall volume.

**3 [DEMO] button** .....page 23  
Starts/stops the DEMO Songs.

⌚ **BGM** .....page 23  
Determines the repeat playback group (Demo Group) (Function Number 024; page 23).

**4 [METRONOME] button**  
Starts/stops the metronome.

⌚ **TIME SIG.** .....page 22  
Determines the time signature of the metronome (Function Number 019; page 22).

**5 [TEMPO/TAP] button**  
Determines the tempo of the SONG/STYLE/metronome. Pressing this button enables you to use the 12 VOICE/SONG/STYLE Category buttons as Number buttons.  
"Tempo" appears on the display, and then use the 12 Number buttons or 12 [+]/[-] buttons or to adjust the tempo value. Press the [+ ] and [- ] buttons simultaneously to reset the value to the default tempo of the current Song or Style.

### Tap Start

You can start play back of the Song or Style by tapping this button at the required tempo-four times for time signatures in 4, and three times for time signatures in 3.

**6 [PHRASE REC] button** ..... page 19  
Records your performance.

**7 Lesson buttons** ..... page 16  
These start/stop playback of the selected Song Lesson.

⌚ **CHORD DICT.** ..... page 18  
Lets you know how to play a certain chord when you know the name.

**8 PART [L]/[R] buttons** ..... page 16  
For selecting a lesson part or a mute part of the current Song.

 
**9 Song control buttons**..... page 16  
For controlling Song playback.

**10 Style control buttons** ..... page 17  
For controlling Style playback.

**11 Mode selection buttons** ..... page 14  
For entering the Voice or Song or Style mode and calling up the selection display of the selected mode.

⌚ **OTS (One Touch Setting)**  
Automatically selects the most suitable Voice (Voice No. 000) when you select a Style or Song (excepting the Song inputted from the 19 [AUX IN] jack).



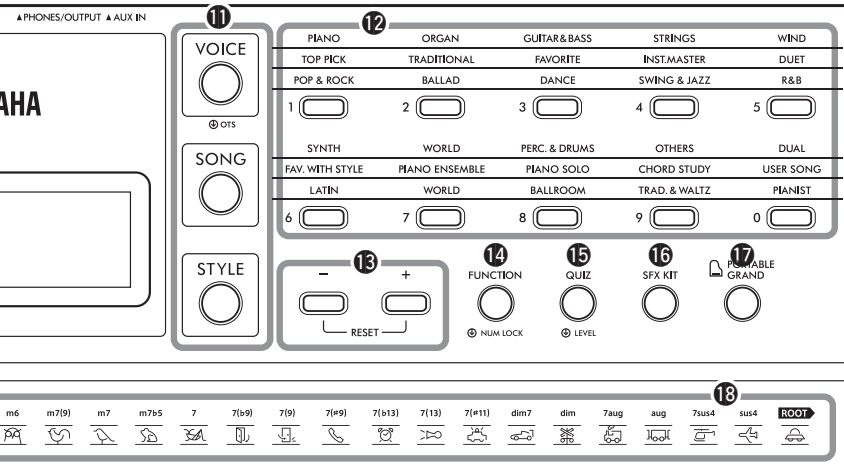

**12 VOICE/SONG/STYLE Category buttons, Number buttons [0]–[9] ..... page 14**

For selecting the desired Voice/Song/Style or directly entering setting values, etc.

**13 [+]/[-] buttons**

For selecting items or setting values. Press and hold either button to continuously increase or decrease the value in the corresponding direction. Press these buttons simultaneously to reset the value to the default.

**14 [FUNCTION] button ..... page 21**

Calls up the Function setting display.

**NUM LOCK**

Calls up the **NUM LOCK** icon on the display and lets you use the 12 buttons as Number buttons.

**15 [QUIZ] button ..... page 19**  
Starts/Stop the Quiz function.

**LEVEL**

 
Determines the Quiz Level (page 19).

**16 [SFX KIT] button ..... pages 15, 29**  
Lets you play various sound effects from the keyboard.

**17 [PORTABLE GRAND] button ..... page 15**  
Automatically selects Voice Number 001 "Grand Piano" for the Voice.

**18 SFX Kit illustrations ..... page 29**  
Indicates the sound effects assigned to each key when pressing the 16 [SFX KIT] button.

**■ Rear Panel**

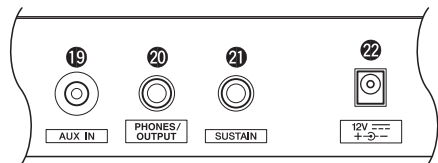

**19 [AUX IN] jack ..... page 20**

For connecting an external audio device such as a smartphone.

**20 [PHONES/OUTPUT] jack ..... page 20**

For connecting headphones and external speakers.

**21 [SUSTAIN] jack ..... page 20**

For connecting a footswitch.

**22 DC IN jack ..... page 10**

For connecting the AC adaptor.

## Display Items

Each icon appears on the display when each function is on.

**DUAL** Indicates that a Dual Voice (No. 387–401) is selected.

**WIDE** Ultra-Wide Stereo (Function Number 017; page 22)

**DUO** Duo Mode (Function Number 022; page 23)

While this icon appears on the display, the VOICE/ SONG/STYLE Category buttons can be used as Number buttons.

▶ **VOICE** ....Voice selection mode

▶ **SONG** ....Song mode

▶ **STYLE** ....Style mode

\* The ▶ mark next to the mode name indicates which mode is active and whose contents can be selected with the Category buttons or [+]/[-] buttons.

\* **VOICE** always appears on the display.

Indicates the chord which is played on the Auto Accompaniment range (page 17) of the keyboard, or specified via Song playback.

Indicates the current measure number of current Style/Song or the Function Number (page 21).

Indicates notes currently being played. Indicates the correct notes when using the Quiz function, the melody notes of a Song when using the Song lesson function, or the notes of chord for the Auto Accompaniment, etc.

Indicates information about the Quiz (page 19).

**L R** Part (page 16)

**A=B** A-B Repeat (page 16)

**ACMP** Style (page 17)

## How to Select a Voice/Song/Style

The diagram shows the control panel with three main sections: VOICE, SONG, and STYLE. Each section has a category button (1) and a selection grid (2). The VOICE grid has buttons 1-5. The SONG grid has buttons 1-5. The STYLE grid has buttons 1-5. The selection process is indicated by numbered arrows: 1 for pressing the category button, 2 for selecting the desired item using the grid buttons, and 3 for selecting using the [+]/[-] buttons.

- 1 Press one of the [VOICE], [SONG], and [STYLE] buttons.
- 2 Select your desired Voice/Song/Style by one of the following 1–3 methods.
  - 1 Select using the Category buttons (12; page 13).

The Voice category names are displayed in the upper row of the panel, the Song category names are in the middle row, and the Style category names are in the lower row. You can select the Voice/Song/Style in each category. Each time these buttons are pressed, the Voice/Song/Style switches sequentially.

 
- 2 Select using the [+]/[-] buttons (18; page 13). Press the [+] button to select the next Voice/Song/Style and [-] button to select the previous one.
- 3 Select using the Number buttons (12; page 13) (NUM LOCK NUM LOCK).

Pressing the [FUNCTION] button for longer than a second enables you to use the Category buttons as Number buttons. Press your desired Voice/Song/Style Number referring to the Voice/Song/Style Lists (pages 26–32). To quit the numerical input, press the [FUNCTION] button for longer than a second again.

# Playing the Keyboard

## Playing a Variety of Instrument Voices

Select and play the various instrument Voices (page 14).

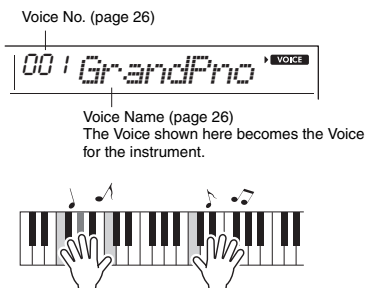

### To play “Fun Sounds” (Sound effects):

Pressing the [SFX KIT] enables you to play various sound effects from the keyboard; barking, yelling, and much more. Try out each key and enjoy the sounds. Don't forget the black keys!

For details on the sound effects assigned to each key, refer to the illustration on the front panel (page 12) or “SFX Kit List” on page 29.

### To simply play a Piano sound:

Press the [PORTABLE GRAND] button. The various settings will be reset to default and Voice Number 001 “Grand Piano” will automatically be selected as the Voice.

#### To apply effects or play with enhanced, more spacious sound:

Try using the effects or functions to enhance the sound. (Refer to the Function list on page 21.)

- Reverb
- Chorus
- Ultra-Wide Stereo

 
## Playing the Keyboard with Two Persons (Duo mode)

When the Duo mode is activated on this instrument, two different players can play the instrument simultaneously, with the same sound, over the same octave range—one person on the left and other on the right.

#### NOTE

- You cannot select different Voices for the left and right sections in the Duo mode.

- 1 Press the [FUNCTION] button several times to call up “DuoMode” (Function Number 022; page 23).
- 2 Press the [+] to set the Duo mode to “on.”  
The keyboard is divided into two sections: left and right at the F#3 key.

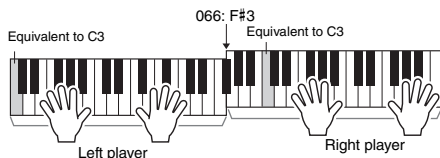

- 3 One person should play the left Voice section of the keyboard while the other plays the right Voice section.
- 4 To exit from the Duo mode, call up “Duo-Mode” (see the step 1 above) and press the [-] button to set it to “off.”

### Controlling sound output in the Duo mode

This output setting can be changed from the “Duo-Type” (Function Number 023; page 23).

 
# Playing and Practice Songs

You can simply enjoy listening to the internal Songs, or use them with just about any of the functions, such as lesson.

## Playing Songs

- 1 Select the desired Song for playback (page 14).
- 2 Press the [START/STOP] button to start playback.  
To stop playback, press the [START/STOP] button again.

### A-B Repeat




While playing a Song, press the [A-B REPEAT] button at the point you want to specify as the start point (A). Press the button again at the point you want to specify as the end point (B).  
To cancel repeat playback, press the button again.

### To change the tempo:

 Refer to ⑤ [TEMPO/TAP] button on page 12.

### To listen only one part of a Song:

While playing a Song, press the [R] or [L] button to mute the part to that you do not want to listen. For example, pressing the [L] button to mute the left part enables you to listen and practice only right part.

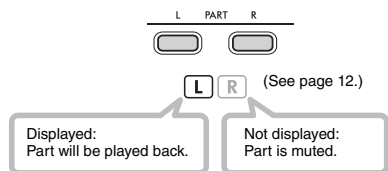


### To adjust the Song Volume:

Adjust the Song Volume via "SongVol" (Function Number 010; page 21).

## Using the Song Lesson Feature

 - 1 Select the desired Song for lesson (page 14).
- 2 Press either or both the [R] and [L] buttons to select the part you want to practice.  
"Left" or "Right" or "BothHand" will appear on the display.

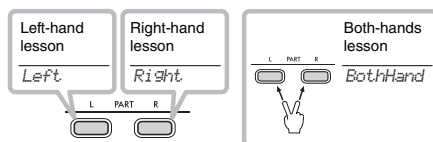

#### NOTE

- In this step, "No LPart" may appear, indicating that the current Song does not contain a left-hand part.

- 3 Select and press one of the buttons corresponding to the desired lesson (from the three below) and start the lesson.

#### Lesson 1 - Listen & Learn

The part you selected will sound as a model. Listen to it carefully and remember it well.

#### Lesson 2 - Timing

Learn to play the notes at the correct timing. Even if you play wrong notes, the correct notes shown in the display will sound.

#### Lesson 3 - Waiting

Learn to play the correct notes shown on the display. The Song pauses until you play the right note.

#### NOTE

- When starting playback of the Song Lesson, the Voice changes to "000" (OTS; page 12).

- 4 When Lesson playback reaches to the end, check your evaluation Grade (Excellent!, Very Good!, Good, or OK) on the display. (Only for Lesson 2 and 3)
- 5 Press the [START/STOP] button to stop the Lesson mode.

#### Chord Study

 
You can hear and experience the sound of the chords used in a typical performance by playing back Song numbers 101 to 112 (in the "CHORD STUDY" category). For details, refer to the "Song List" on page 32.

# Playing Rhythm and Accompaniment (Style)


This instrument includes the Auto Accompaniment feature that automatically plays appropriate “Styles” (rhythm + bass + chord accompaniment), controlled simply playing chords with your left hand.

You can select how you want to play the chords from two ways: “Smart Chord,” which lets you play chords by playing a key with only one finger, and “Multi Finger,” which lets you play them normally, with all the constituent notes.

The explanations here apply when playing Styles with “Smart Chord.” If you want to play all the notes of the chords yourself, set the Fingering Type to “Multi Finger.”



- 1 Press the [STYLE] button.
- 2 Select your desired Style (page 14).
- 3 Set the Function Setting “Smart Chord Key” (Function Number 009; page 21) to match the key signature of your music score.  
For details on “Smart Chord Key,” refer to page 18.
- 4 Press the [ACMP ON/OFF] button to turn on Auto Accompaniment.  
With this operation, the area of the keyboard to the left of the Split Point (054: F#2) becomes the “Auto Accompaniment range” and is used only for specifying the chords.

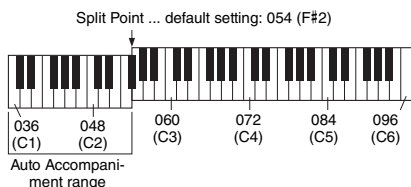 

The Split Point can be changed on the Function setting display by holding down the [ACMP ON/OFF] button for longer than a second.

## To play back the rhythm part only

If you press the [START/STOP] button without pressing the [ACMP ON/OFF] button in this step, only the rhythm part can be played back.

- 5 Press the [SYNC START] button to turn Synchro Start on.  
**Synchro Start:** This function lets you start the Style as soon as you start playing the keyboard in the Auto Accompaniment range.
- 6 Press the [MAIN/AUTO FILL] button to select Main A or Main B.  
**MAIN:** This is the accompaniment pattern for the main part of the Song. There are two variations (A and B).
- 7 Press the [INTRO/ENDING/rit.] button to add an Intro part before starting Style playback.
- 8 Play a key with your left hand in the Auto Accompaniment range to start playback of the Intro.  
Play just the root note with your left hand while playing melodies with your right hand.  
Press the [MAIN/AUTO FILL] button as necessary to switch between Main A and B. The Fill-in is added between them.  
**FILL-IN(AUTO FILL):** A short phrase is automatically added before changing to Main A or B.
- 9 Press the [INTRO/ENDING/rit.] button to add an Ending part before stopping Style playback.

You can have the Ending gradually slow down (ritardando) by pressing the [INTRO/ENDING/rit.] button again while the Ending is playing back.

You can also stop the Style by pressing the [START/STOP] button.

## To adjust the Style Volume:

Adjust the Style Volume via "StyleVol" (Function Number 007; page 21).

## To change the tempo:

Refer to **5** [TEMPO/TAP] button on page 12.

## How to Play Chords when Playing the Style (Fingering Type)

The way to play a chord when playing the Style differs by Fingering Types. Set the desired Fingering Type via Function Number 008 (page 21) and enjoy playing the keyboard with the Style.

### ● Smart Chord (Default setting)

You can play the Style with playing only root note of a chord.

### Smart Chord Key setting

When playing with the Style played with the Smart Chord function, you need to set the "key" of the Songs you want to play in advance. Set the number of the sharps (#) or flats (b) on your music score via the Function setting "Smart Chord Key" (Function Number 009; page 21).

For example, when you want to play the music score below, you need to set the Smart Chord Key to "FL2" (2 flats).



### Smart Chord Chart

When setting the Fingering Type to Smart Chord, the appropriate chord plays according to the root note of a chord. However, the melody of some Songs may not be suitable for the chord. For details on the chords you can play, refer to "Smart Chord Chart" on page 33.

#### NOTE

- When playing a Song which modulates (changes key) in the middle, "Multi Finger" is recommended.

### ● Multi Finger

With this Fingering Type, you can use the following two methods to play the Styles.

**Fingered:** Lets you play the notes of the chords in the normal way.

 
**Single Finger:** Lets you easily play chords using only one, two, or three fingers based on the simple rule (refer to "SONG BOOK" on page 8). (Only for Major, Minor, Seventh, and Minor seventh chords)

For details on the way to play a chord with "Multi Finger," refer to "SONG BOOK".

### ● Looking Up Chords Using the Chord Dictionary

This Dictionary function is useful when you know the name of a certain chord but do not know the constituent notes to play.

Press and hold the [3 WAITING] button (page 12) for longer than a second to call up "Dict." This operation will divide the entire keyboard into the three ranges, split at C3 and C5 as illustrated below:

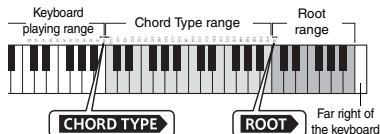

- 1 Press the root note of the chord in the Root range.
- 2 Specify a chord type in the Chord Type range referring to the illustration above the keyboard in the range. The notes you should play are shown in the display.
- 3 Play the corresponding notes in the Keyboard playing range. When you've played the chord properly, a bell sound signals your success.
- 4 To exit the Chord Dictionary, press one of these buttons; [VOICE], [SONG], or [STYLE].

Since chord information and some music scores in the "SONG BOOK" (page 8) gives you indications that let you experience the performance along with Styles, refer to that as well as this manual.

# Try the Quiz - and Guess the Sound!

With this instrument, you can develop your ear for pitch by playing with the Quiz function as well as enjoying playing the keyboard.

## 1 Select the desired Voice that you want to guess (page 14) in advance.

Pressing the [SFX KIT] button lets you to try to guess some fun sounds.

## 2 Press the [QUIZ] button to start Quiz.



## 3 Select the same note from the instrument and play the key.

When you pressed the [SFX KIT] button in step 1, select the illustration above the keyboard that matches the sound from the instrument and play the key.

 
- There are a total of 10 questions.
- The answer time for a question is about 10 seconds.
- You can try the same Quiz question three times and check the number of times of answering on the display.
- When the Quiz finishes with the 10th question, you can check your grade (Excellent!, Very Good!, or Good) on the display.

To quit the Quiz before the 10th question, press the [QUIZ] button again.

## To change the Quiz Level (difficulty):

Press the [QUIZ] button for longer than a second to change the Quiz Level. The difficulty differs by level. Select your desired level and enjoy the Quiz! For details on the level, refer to the "Quiz Level" (Function Number 018; page 22).

## Display items for the Quiz



### ① The number of correct answers

⊙ means the number of correct answers and ⊗ means the number of incorrect answers.

### ② The number of times of answering

You can check how many times you tried the same question.

### ③ Quiz Level (difficulty)

You can check the current Quiz Level.

# Recording Your Performance (Phrase Recording)

You can record your performance as a User Song (Song No. 113), which can then be played back on the instrument.

## 1 Select the desired Voice to play (page 14).

## 2 Press the [PHRASE REC] button to enable the Record mode.

To exit from the Record mode press the [PHRASE REC] button again.

### NOTICE

- If the User Song is recorded, you will record over and erase previous data in "User Song."

## 3 Play the keyboard or press the [START/STOP] button to start recording.

### NOTICE

- Never attempt turn the power off or connect or disconnect the AC adaptor. Doing so can result in a loss of data.

## 4 Press the [START/STOP] button to stop recording.

## 5 To play back the recorded Song, press the [START/STOP] button.

 
### NOTE

- To delete the User Song, press the [START/STOP] button again after pressing the [START/STOP] button in step 3, without playing any key.

# Connecting to Other Devices

## Playing an External Audio Device, such as a Smartphone, with the Built-in Speakers

- 1 Turn off the power for both the audio device and this instrument.
- 2 Connect the audio device to the instrument's [AUX IN] jack.  
Use an audio cable with no resistance having a stereo-mini plug on one side for connecting to this instrument, and a proper plug to match the output jack of the audio device on the other side.

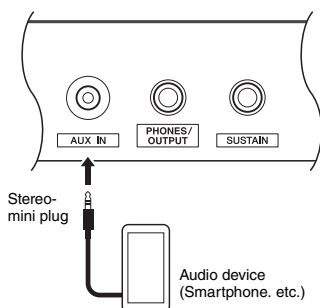


- 3 Turn on the audio device, then this instrument.
- 4 Play back the connected audio device.  
The sound of the audio device is output through the speakers of this instrument.
- 5 Adjust the Volume balance between the audio device and this instrument.  
If possible, adjust the playback level of the audio device first, to achieve optimum balance.
- 6 Stop playback of the audio device.

### NOTICE

 - To avoid possible damage to the external audio device and this instrument, first turn on the power to the external audio device, then to this instrument. Reverse this order when you turn the power off.

## Connecting Headphones or External Speakers

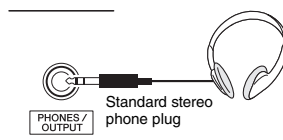

Connect a pair of headphones to the [PHONES/OUTPUT] jack. This jack also functions as an external output. By connecting to a computer, keyboard amplifier, recorder, or other audio device, you can output the audio signal of this instrument to that external device. The speakers of this instrument are automatically shut off when a plug is inserted into this jack.


### CAUTION

 - Do not use the instrument or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss.
- Before connecting the instrument to other electronic components, turn off the power of all the components. Also, before turning any components on or off, make sure to set all volume levels to minimum. Otherwise, damage to the components or electrical shock may occur.

### NOTICE

- To avoid possible damage to the external device, first turn on the power to the instrument, then to the external device. Reverse this order when you turn the power off.

## Using a Pedal (Sustain)

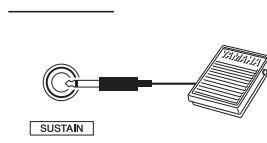

You can produce a natural sustain as you play by pressing a footswitch (FC5 or FC4A; sold separately) plugged into the [SUSTAIN] jack.

### NOTE

- Plug or unplug the footswitch while the power is off. Also, do not press the footswitch when turning the power on. Doing so changes the polarity of the footswitch, resulting in reversed operation.
- The sustain function does not affect Style (Auto Accompaniment; page 17).



# The Functions

The Functions settings provide access to range of detailed instrument parameters such as Tuning, Split Point, Voices and Effects.

## 1 Press the [FUNCTION] button several times until the desired item appears.

To decrease the Function Number by one, simultaneously hold down the [FUNCTION] button and press the [-] button briefly. Simply pressing only [+] or [-] button does not change the Function Number.

## 2 Set the value by using the Number buttons or [+]/[-] buttons.

Press the [+] and [-] buttons simultaneously to recall the default setting.

### NOTE

- Press the [FUNCTION] button in the step 1 enables you to use the VOICE/SONG/STYLE Category buttons as Number buttons.

## 3 To exit the Function settings, press one of these buttons; [VOICE], [SONG] or [STYLE].

### ● Function List

Function Number	Function Name	Display	Range/Settings	Default Value	Descriptions
<b>Overall</b>					
001	Transpose	<i>TransPos</i>	-12~12	0	Determines the pitch of the instrument in semitone increments.
002	Tuning	<i>Tuning</i>	427.0Hz~453.0Hz	440.0Hz	Determines the fine tuning of the pitch of the entire instrument in approx. 0.2Hz increments.
003	Split Point	<i>SPlitPnt</i>	036~096 (C1~C6)	054(F#2)	Determines the Split "point"—in other words, the key that separates the Auto Accompaniment range and Voice (page 17).
<b>Voice (page 15)</b>					
004	Volume	<i>M. Volume</i>	000~127	*	Adjusts the volume of keyboard performance when performing along with a Song or a Style.
005	Octave	<i>M. Octave</i>	-2~2	*	Determines the octave range for the Voice.
006	Chorus Depth	<i>M. Chorus</i>	000~127	*	Determines how much of the Voice's signal is sent to the Chorus effect (see "Chorus Type" on page 22).
<b>Style (page 17)</b>					
007	Style Volume	<i>StyleVol</i>	000~127	100	Determines the volume of the Style (page 18).
008	Fingering Type	<i>FingType</i>	1 (SmartChd) 2 (Multi)	1 (SmartChd)	Determines how to play the chord in Accompaniment Section when playing with a Style.
009	Smart Chord Key	<i>S. ChdKey</i>	FL7 (7 Flats ♭) – SP0 (No Key Signature) – SP7 (7 Sharps #)	SP0 (No Key Signature)	Determines the Key Signature when the Fingering Type is set to "Smart Chord." For example, if there are 2 sharps(#) on your music score, press the [+] / [-] buttons until "SP2" appears on the display.
<b>Song (page 16)</b>					
010	Song Volume	<i>SongVol</i>	000~127	100	Determines the volume of the Song (page 16).
011	Song Melody Voice	<i>MelodyVc</i>	001~401	**	<p>You can change a Song's melody Voice to any other desired Voice as follows:</p> <ol style="list-style-type: none"> <li>1. Select a Song (page 14).</li> <li>2. Select the desired Voice (page 14).</li> <li>3. Press the [FUNCTION] button repeatedly to call up "MelodyVc."</li> <li>4. Press the [+] button.</li> </ol> <p>"SONG MELODY VOICE" appears in the display for a few seconds, and the selected Voice in step 2 replaces the Song's original melody Voice. Selecting another Song will cancel the Melody Voice change.</p>

Function Number	Function Name	Display	Range/Settings	Default Value	Descriptions																		
Effect (page 15)																							
012	Reverb Type	<i>Reverb</i>	01–03 (Hall 1–3) 04–05 (Room 1–2) 06–07 (Stage 1–2) 08–09 (Plate 1–2) 10 (Off)	**	Determines the Reverb type. The best suited type is called up by selecting a Song or Style.  <b>Reverb</b> Adds the ambience of a club or concert hall to the sound.																		
013	Reverb Level	<i>RevLevel</i>	000–127	64	Determines how much of the Voice's signal is sent to the Reverb effect.																		
014	Chorus Type	<i>Chorus</i>	1 (Chorus1) 2 (Chorus2) 3 (Chorus3) 4 (Flanger1) 5 (Flanger2) 6 (Off)	**	Determines the Chorus type. The best suited type is called up by selecting a Song, Style or Voice. However, this Chorus effect is not applied to some Voices because their Chorus Depth (Function Number 006) are set to "000" by default. In that case, raise the Chorus Depth as desired.  <b>Chorus</b> Makes the Voice sound richer, warmer and more spacious.																		
015	Panel Sustain	<i>Sustain</i>	on/oFF	oFF	Determines whether the Panel Sustain function is on or off.																		
016	Master EQ Type	<i>MasterEQ</i>	1 (Speaker) 2 (Headphone) 3 (Boost) 4 (Piano) 5 (Bright) 6 (Mild)	1 (Speaker)	Sets the equalizer applied to the speaker output for the desired sound in different listening situations.  <b>Master EQ types</b> <table><tr><td>1</td><td>Speaker</td><td>Optimum for listening via the instrument's built-in speakers.</td></tr><tr><td>2</td><td>Headphone</td><td>Optimum for headphones, or for listening via external speakers.</td></tr><tr><td>3</td><td>Boost</td><td>Features more powerful sound. When selecting this type, there are some Voices or Styles that may easily distort.</td></tr><tr><td>4</td><td>Piano</td><td>Optimum for piano solo performance.</td></tr><tr><td>5</td><td>Bright</td><td>Lowers the mid range for a brighter sound.</td></tr><tr><td>6</td><td>Mild</td><td>Lowers the high range for a softer sound.</td></tr></table>	1	Speaker	Optimum for listening via the instrument's built-in speakers.	2	Headphone	Optimum for headphones, or for listening via external speakers.	3	Boost	Features more powerful sound. When selecting this type, there are some Voices or Styles that may easily distort.	4	Piano	Optimum for piano solo performance.	5	Bright	Lowers the mid range for a brighter sound.	6	Mild	Lowers the high range for a softer sound.
1	Speaker	Optimum for listening via the instrument's built-in speakers.																					
2	Headphone	Optimum for headphones, or for listening via external speakers.																					
3	Boost	Features more powerful sound. When selecting this type, there are some Voices or Styles that may easily distort.																					
4	Piano	Optimum for piano solo performance.																					
5	Bright	Lowers the mid range for a brighter sound.																					
6	Mild	Lowers the high range for a softer sound.																					
017	Wide Type	<i>Wide</i>	1 (Wide1) 2 (Wide2) 3 (Wide3) 4 (Wide Off)	4 (Wide Off)	Determines the Ultra-Wide Stereo type. Higher values produce a greater Wide effect (except for 4).																		
Quiz (page 19)																							
018	Quiz Level	<i>QuizLvl</i>	AUT (Auto), 1, 2, 3	AUT (Auto)	Determines the Quiz Level. <table><tr><td>AUT (Auto)</td><td>The Quiz Level increases the difficulty from Level 1 to Level 3 according to the number of correct answers. Correct answers 0-4: Level 1 5-7: Level 2 8-9: Level 3</td></tr><tr><td>1</td><td>One note sounds.</td></tr><tr><td>2</td><td>Three notes sound one-by-one.</td></tr><tr><td>3</td><td>Three notes sound simultaneously.</td></tr></table>	AUT (Auto)	The Quiz Level increases the difficulty from Level 1 to Level 3 according to the number of correct answers. Correct answers 0-4: Level 1 5-7: Level 2 8-9: Level 3	1	One note sounds.	2	Three notes sound one-by-one.	3	Three notes sound simultaneously.										
AUT (Auto)	The Quiz Level increases the difficulty from Level 1 to Level 3 according to the number of correct answers. Correct answers 0-4: Level 1 5-7: Level 2 8-9: Level 3																						
1	One note sounds.																						
2	Three notes sound one-by-one.																						
3	Three notes sound simultaneously.																						
Metronome (page 12)																							
019	Time Signature Numerator	<i>TimeSig</i>	00–15	**	Determines the time signature of the Metronome.																		
020	Metronome Volume	<i>MetroVol</i>	000–127	100	Determines the volume of the Metronome.																		
Lesson (page 16)																							
021	Your Tempo	<i>YourTemp</i>	on/oFF	on	This parameter is for the Lesson 3 "Waiting." When set to ON, playback tempo will change for matching the speed you are playing at. When set to OFF, playback tempo will be maintained regardless of the speed you are playing at.																		

Function Number	Function Name	Display	Range/Settings	Default Value	Descriptions	
Duo (page 15)						
022	Duo Mode	DuoMode	on/off	off	Turns Duo Mode (page 15) on or off.	
023	Duo Type	DuoType	1 (Balance) 2 (Separate)	2 (Separate)	Determines how sounds are output from the speaker in the Duo Mode.	
					Balance	The performance sounds of the left section and the right section will sound from both the left and right speakers.
					Separate	The performance sound of the left section will sound from the left speaker, and the performance sound of the right section will sound from the right speaker.
Demo (page 12)						
024	Demo Group	DemoGrp	1 (Demo) 2 (Preset) 3 (User)	1 (Demo)	Determines the repeat playback group. After holding down the [DEMO] button for longer than a second to select a playback Demo Group, pressing [DEMO] button starts playback of all internal Songs in each Demo Group.	
					Demo	Preset Songs (Song Number: 001–003)
					Preset	All preset Songs (Song Number: 001–100)
	User	User Song (Song Number: 113)				
025	Demo Play Mode	PlayMode	1 (Normal) 2 (Random)	1 (Normal)	Determines the repeat playback mode.	
Auto Power Off (page 11)						
026	Auto Power Off Time	AutoOff	off, 5/10/15/30/60/120 (minutes)	30 minutes	Specifies the time that will elapse before the instrument's power is automatically turned off.	
Battery (page 10)						
027	Battery Type	Battery	1 (Alkaline) 2 (Ni-MH)	1 (Alkaline)	Selects the type of batteries you have installed to this instrument.	
					Alkaline	Alkaline battery/manganese battery
					Ni-MH	Rechargeable battery

\* The appropriate value is automatically set for each Voice combination.

\*\* The appropriate value is automatically set for each Song or Style.

 
## Backup and Initialization

The following Backup parameters will be maintained even if the power is turned off.

### Backup parameters

- User Song (page 19)
- FUNCTION Settings:  
Tuning, Fingering Type, Master EQ Type, Your Tempo, Auto Power Off Time, Battery Type

You can initialize backup data via the following method. While holding down the highest white key, press the [⏻] (Standby/On) switch to turn the power on.

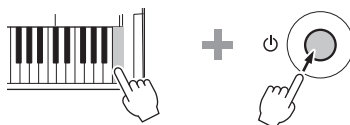

# Troubleshooting

Problem	Possible Cause and Solution
Not all of the Voices seem to sound, or the sound seems to be cut off.	The instrument is polyphonic up to a maximum of 32 notes—including auto accompaniment, Song, and Metronome. Notes exceeding this limit will not sound.
The sound of the Voice changes from note to note.	This is normal. The AWM tone generation method uses multiple recordings (samples) of an instrument across the range of the keyboard; thus, the actual sound of the Voice may be slightly different from note to note.
Power suddenly and unexpectedly turns off.	This is normal and the Auto Power Off function may have been activated (page 11). If you need to disable the Auto Power Off function, select "Off" in the Function settings (Function Number 026; page 23).
When the instrument is turned on, power is turned off suddenly and unexpectedly.	The protection circuit has been activated due to over current. This may occur when an AC adaptor other than the one specified is used, or an AC adaptor is damaged. Use the specified adaptor only (see "Specifications". "Power Supply" below). If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

# Specifications

## Product Name

Digital Keyboard

## Dimensions (W × D × H)

940 mm × 317 mm × 104 mm (37" × 12-1/2" × 4-1/8")

## Weight

4.0 kg (not including batteries) (8 lb, 13 oz)

## Keyboard

Number of Keys: 61 (C1 – C6)

## Voices

- Polyphony (max.): 32
- Number of Voices: 384 Voices + 17 drum/SFX kits

## Effects

- Types: Reverb 9 types, Chorus 5 types, Master EQ 6 types, Ultra-Wide Stereo 3 types

## Accompaniment Styles

- Number of Styles: 143
- Fingering: Smart Chord, Multi Finger
- Style Control: ACMP ON/OFF, SYNC START, START/STOP, INTRO/ENDING/rit., MAIN/AUTO FILL

## Songs

- Number of Preset Songs: 112 (including Chord Study: 12)
- A-B Repeat

## Recording

- Number of Songs: 1
- Number of Tracks: 1
- Data Capacity: Approx. 300 notes

## Function

- Lesson: [1 LISTEN & LEARN], [2 TIMING], [3 WAITING]
- Chord Dictionary
- Panel Sustain
- One Touch Setting (OTS)
- Metronome
- Tempo Range: 11 – 280 (Tap Tempo: 32 – 280)
- Transpose: -12 – 0 – +12
- Tuning: 427.0 – 440.0 – 453.0 Hz (approx. 0.2 Hz increments)
- Duo
- Quiz
- Miscellaneous: PIANO button ([PORTABLE GRAND] button), SFX Kit button

## Connectivity

- DC IN: 12 V
- Headphones/Output: Standard stereo phone jack (PHONES/OUTPUT) ×1
- Sustain Pedal
- AUX IN: Stereo mini jack ×1

## Sound System

- Amplifiers: 2.5 W + 2.5 W
- Speaker: 12 cm x 2

## Power Supply

- Power Supply:
  - AC Adaptor: PA-130 or an equivalent recommended by Yamaha
  - Batteries: Six "AA" size alkaline (LR6), manganese (R6) or Ni-MH rechargeable batteries
- Power Consumption: 6 W (When using PA-130 AC adaptor)
- Auto Power Off function

## Included Accessories

Owner's Manual, Online Member Product Registration, Music rest, AC adaptor \* (PA-130 or an equivalent recommended by Yamaha)

\* May not be included depending on your area. Please check with your Yamaha dealer.

## Separately Sold Accessories

(May not be available depending on your area.)

- AC adaptor
  - Users within U.S. or Europe: PA-130 or an equivalent recommended by Yamaha
  - Others: PA-3C, PA-130 or equivalent
- Headphones: HPH-50/HPH-100/HPH-150
- Footswitch: FC4A/FC5
- Keyboard stand: L-2C

\* The contents of this manual apply to the latest specifications as of the publishing date. To obtain the latest manual, access the Yamaha website then download the manual file. Since specifications, equipment or separately sold accessories may not be the same in every locale, please check with your Yamaha dealer.

# Index

<b>A</b>			
A-B Repeat .....	16	Metronome Volume .....	22
AC Adaptor .....	10	Multi Finger .....	17
Auto Accompaniment .....	17	Music Rest .....	11
AUTO FILL .....	17	<b>N</b>	
Auto Power Off .....	11, 23	NUM LOCK .....	13, 14
AUX IN .....	20	<b>O</b>	
<b>B</b>		Octave .....	21
Backup .....	23	OTS (One Touch Setting) .....	12
Backup parameters .....	23	<b>P</b>	
Battery .....	10	Panel Sustain .....	22
Battery Type .....	23	Part .....	16
BGM .....	12	Pedal .....	20
<b>C</b>		Phrase Recording .....	19
Chord Dictionary .....	18	Piano .....	15
Chord Study .....	16, 32	Power Requirements .....	10
Chorus .....	15, 22	<b>Q</b>	
Chorus Depth .....	21	Quiz .....	19
Chorus Type .....	22, 32	Quiz Level .....	19, 22
<b>D</b>		<b>R</b>	
Demo Group .....	23	Recording .....	19
Demo Play Mode .....	23	Reverb .....	15, 22
Display .....	14	Reverb Level .....	22
Duo mode .....	15	Reverb Type .....	22, 32
Duo Type .....	23	Rhythm .....	17
<b>E</b>		rit. (ritardando) .....	17
effect .....	15	<b>S</b>	
Effect Type List .....	32	SFX Kit .....	15
Ending .....	17	SFX Kit List .....	29
<b>F</b>		Single Finger .....	18
FILL-IN .....	17	Smart Chord .....	17
Fingered .....	18	Smart Chord Chart .....	33
Fingering Type .....	18, 21	Smart Chord Key .....	17, 21
Function List .....	21	Song .....	16
Functions .....	21	Song List .....	31
<b>G</b>		Song Volume .....	16, 21
Grade .....	16	Sound effects .....	15
<b>H</b>		Specifications .....	24
Headphones .....	20	Split Point .....	17, 21
<b>I</b>		Style .....	17
Initialization .....	23	Style List .....	30
Intro .....	17	Style Volume .....	18, 21
<b>L</b>		Sustain .....	20
Lesson .....	16	Synchro Start .....	17
Level .....	19	<b>T</b>	
Listen & Learn .....	16	Tap .....	12
<b>M</b>		Tempo .....	12
Main .....	17	Time Signature .....	22
Master EQ Type .....	22	Timing .....	16
Master Volume .....	11	Transpose .....	21
Metronome .....	12, 22	Troubleshooting .....	24
		Tuning .....	21
		<b>U</b>	
		Ultra-Wide Stereo .....	15
		<b>V</b>	
		Voice .....	15
		Voice List .....	26
		Volume (Master) .....	11
		Volume (Song) .....	16
		Volume (Style) .....	18
		Volume (Voice) .....	21
		<b>W</b>	
		Waiting .....	16
		Wide Type .....	22
		<b>Y</b>	
		Your Tempo .....	22

# Voice List

## Maximum Polyphony

The instrument has 32-note maximum polyphony. This means that it can play a maximum of up to 32 notes at once, regardless of what functions are used. Auto accompaniment uses a number of the available notes, so when auto accompaniment is used the total number of available notes for playing on the keyboard is correspondingly reduced. The same applies to the Song functions. If the maximum polyphony is exceeded, earlier played notes will be cut off and the most recent notes have priority (last note priority).

### NOTE

- Some voices may sound continuously or have a long decay after the notes have been released while the sustain pedal (footswitch) is held.

Voice No.	Voice Name
<b>PIANO</b>	
001	Grand Piano
002	Electric Piano 1
003	Harpsichord 1
004	Clavi
005	Bright Piano
006	Mellow Piano
007	Honky-tonk Piano
008	Electric Piano 2
009	Electric Grand Piano
010	Chorus Electric Piano 1
011	Piano Strings
012	Dream
<b>ORGAN</b>	
013	Drawbar Organ 1
014	Percussive Organ 1
015	16+2/2/3 Organ
016	Rock Organ
017	Rotary Organ
018	Pipe Organ 1
019	Accordion
020	Tango Accordion 1
021	Harmonica 1
022	Drawbar Organ 2
023	60s Drawbar Organ 1
024	70s Drawbar Organ 1
025	Percussive Organ 2
026	Detuned Percussive Organ
027	Notre Dame
028	Reed Organ
<b>GUITAR&amp;BASS</b>	
029	Nylon Guitar
030	Steel Guitar
031	Clean Guitar
032	Overdriven Guitar
033	Distortion Guitar
034	Muted Guitar
035	Finger Bass 1
036	Acoustic Bass 1
037	Pick Bass
038	Fretless Bass 1
039	Slap Bass 1
040	Slap Bass 2
041	Synth Bass 1
042	Techno Synth Bass
043	DX Bass
<b>STRINGS</b>	
044	Strings 1
045	Strings 2
046	Tremolo Strings
047	Orchestra 1
048	Pizzicato Strings

Voice No.	Voice Name
049	Violin
050	Cello
051	Contrabass
052	Orchestral Harp
053	Synth Strings 1
054	Synth Strings 2
055	Orchestra Hit 1
056	Choir Aahs
057	Voice Oohs
058	Synth Voice 1
<b>WIND</b>	
059	Brass Section
060	Trumpet
061	Trombone 1
062	French Horn 1
063	Tuba
064	Muted Trumpet
065	Sax Section
066	Tenor Sax
067	Alto Sax
068	Soprano Sax
069	Flute
070	Piccolo
071	Clarinet
072	Oboe
073	Recorder
074	Ocarina
075	Synth Brass 1
076	Resonant Synth Brass
<b>SYNTH</b>	
077	Square Lead 1
078	Sawtooth Lead 1
079	Sine Lead
080	Voice Lead
081	Fifths Lead
082	Funky Lead
083	Fargo
084	New Age Pad
085	Fantasy
086	Bowed Pad
087	Metallic Pad
088	Halo Pad
089	Crystal
090	Atmosphere
091	Brightness
092	Sweep Pad
093	Rain
094	Sound Track
<b>WORLD</b>	
095	Er Hu
096	Di Zi
097	Pi Pa

Voice No.	Voice Name
098	Sitar 1
099	Pungi
100	Harmonium 1 (Single Reed)
101	Shakuhachi
102	Koto
103	Pan Flute
104	Kanoon
105	Oud
106	Fiddle
107	Bagpipe
108	Dulcimer 1
109	Kalimba
<b>PERC.&amp;DRUMS</b>	
110	Vibraphone
111	Marimba
112	Xylophone
113	Glockenspiel
114	Steel Drums
115	Tubular Bells
116	Timpani
117	Standard Kit 1
118	Standard Kit 1 + Chinese Percussion
119	Indian Kit
120	Arabic Kit
121	SE Kit 1
122	SE Kit 2
123	SE Kit 3
124	SFX Kit
<b>OTHERS</b>	
125	Mono Grand Piano
126	Harpsichord 2
127	Electric Piano 3
128	Chorus Electric Piano 2
129	Detuned Electric Piano
130	DX + Analog Electric Piano
131	Wah Clavi
132	60s Drawbar Organ 2
133	60s Drawbar Organ 3
134	70s Drawbar Organ 2
135	Detuned Drawbar Organ
136	70s Percussive Organ
137	Organ Bass
138	Slow Rotary Organ
139	Fast Rotary Organ
140	Pipe Organ 2
141	Pipe Organ 3
142	Organ Flute
143	Tremolo Organ Flute
144	Cheezy Organ
145	Light Organ
146	Puff Organ
147	Tango Accordion 2

Voice No.	Voice Name
148	Harmonica 2
149	Nylon & Steel Guitar
150	Steel Guitar with Body Sound
151	Muted Steel Guitar
152	12-string Guitar
153	Jazz Guitar
154	Jazz Amp
155	Jazz Man
156	Chorus Guitar
157	Funk Guitar
158	Guitar Pinch
159	Feedback Guitar 1
160	Feedback Guitar 2
161	Guitar Feedback
162	Guitar Harmonics 1
163	Guitar Harmonics 2
164	Guitar Harmonics 3
165	Acoustic Bass 2
166	Finger Bass 2
167	Finger Dark
168	Finger Slap Bass
169	Fretless Bass 2
170	Fretless Bass 3
171	Fretless Bass 4
172	Slap Bass 3
173	Jazz Rhythm
174	Bass & Distorted Electric Guitar
175	Muted Pick Bass
176	Modulated Bass
177	Punch Thumb Bass
178	Synth Bass 2
179	Synth Bass 2 Dark
180	Mellow Synth Bass
181	Sequenced Bass
182	Click Synth Bass
183	Modular Synth Bass
184	Strings 3
185	Slow Strings
186	Stereo Strings
187	Stereo Slow Strings
188	Orchestra 2
189	60s Strings
190	Suspense Strings
191	Legato Strings
192	Warm Strings
193	Kingdom
194	Slow Tremolo Strings
195	Tremolo Orchestra
196	Slow Violin
197	Viola
198	Orchestra Hit 2
199	Impact
200	Stereo Choir
201	Mellow Choir
202	Choir Strings
203	Synth Voice 2
204	Choral
205	Analog Voice
206	Breathy Tenor Sax
207	Baritone Sax
208	English Horn
209	Bassoon
210	Warm Trumpet
211	Trombone 2

Voice No.	Voice Name
212	Trumpet & Trombone Section
213	French Horn 2
214	French Horn Solo
215	Horn Orchestra
216	Synth Brass 2
217	Soft Brass
218	Choir Brass
219	Blown Bottle
220	Whistle
221	Square Lead 2
222	LM Square
223	Sawtooth Lead 2
224	Thick Sawtooth
225	Dynamic Sawtooth
226	Digital Sawtooth
227	Solo Sine
228	Calliope Lead
229	Chiff Lead
230	Charang Lead
231	Bass & Lead
232	Hollow
233	Shroud
234	Mellow
235	Big Lead
236	Sequenced Analog
237	Pure Lead
238	Distorted Lead
239	Big Five
240	Big & Low
241	Fat & Perky
242	Warm Pad
243	Poly Synth Pad
244	Equinox
245	Choir Pad
246	Soft Whirl
247	Itopia
248	Goblins
249	Echoes
250	Sci-Fi
251	African Wind
252	Carib
253	Prologue
254	Synth Drum Comp
255	Popcorn
256	Tiny Bells
257	Round Glockenspiel
258	Glockenspiel Chimes
259	Clear Bells
260	Chorus Bells
261	Soft Crystal
262	Air Bells
263	Warm Atmosphere
264	Hollow Release
265	Nylon Electric Piano
266	Nylon Harp
267	Harp Vox
268	Atmosphere Pad
269	Goblins Synth
270	Creeper
271	Ritual
272	To Heaven
273	Night
274	Glisten
275	Bell Choir

Voice No.	Voice Name
276	Bell Harp
277	Soft Vibraphone
278	Soft Marimba
279	Sine Marimba
280	Balimba
281	Log Drums
282	Celesta
283	MusicBox 1
284	MusicBox 2
285	Church Bells
286	Carillon
287	Tinkle Bell
288	Agogo
289	Woodblock
290	Castanets
291	Melodic Tom 1
292	Melodic Tom 2
293	Real Tom
294	Rock Tom
295	Electronic Percussion
296	Analog Tom
297	Synth Drum
298	Taiko Drum
299	Gran Cassa
300	Gamelimba
301	Glass Percussion
302	Reverse Cymbal
303	Banjo
304	Muted Banjo
305	Dulcimer 2
306	Cimbalom
307	Santur
308	Rabab
309	Harmonium 2 (Double Reed)
310	Harmonium 3 (Triple Reed)
311	Tanpura
312	Sitar 2
313	Detuned Sitar
314	Shehnai
315	Gopichant
316	Tabla
317	Gu Zheng
318	Yang Qin
319	Shamisen
320	Taisho-kin
321	Mandolin
322	Ukulele
323	Bonang
324	Altair
325	Gamelan Gongs
326	Stereo Gamelan Gongs
327	Rama Cymbal
328	Thai Bells
329	Fret Noise
330	Breath Noise
331	Cutting Noise 1
332	Cutting Noise 2
333	String Slap
334	Flute Key Click
335	Bird Tweet 1
336	Bird Tweet 2
337	Telephone Ring 1
338	Telephone Ring 2
339	Phone Call










 
 



 


Voice No.	Voice Name
340	Shower
341	Thunder
342	Wind
343	Stream
344	Seashore
345	Bubble
346	Feed
347	Dog
348	Horse
349	Maou
350	Door Squeak
351	Door Slam
352	Scratch Cut
353	Scratch Split
354	Wind Chime
355	Car Engine Ignition
356	Car Tires Squeal
357	Car Passing
358	Car Crash
359	Siren
360	Train
361	Helicopter
362	Jet Plane
363	Starship
364	Burst
365	Roller Coaster
366	Submarine
367	Laugh
368	Scream
369	Punch
370	Heartbeat
371	Footsteps
372	Applause
373	Gunshot
374	Machine Gun
375	Laser Gun
376	Explosion
377	Firework
378	Standard Kit 2
379	Room Kit
380	Rock Kit
381	Electronic Kit
382	Analog Kit
383	Dance Kit
384	Jazz Kit
385	Brush Kit
386	Symphony Kit
<b>DUAL*</b>	
387	Octave Piano
388	Piano & Pizzicato Strings
389	Piano & Flute
390	Piano Pad
391	Octave Honky-tonk Piano
392	Harpsichord & Strings
393	Electric Piano Pad 1
394	Electric Piano Pad 2
395	Electric Piano Pad 3
396	Octave Strings
397	Octave Brass
398	Orchestra Tutti
399	Octave Choir
400	Jazz Section
401	Flute & Clarinet


 











 






\* When you select a Voice of the DUAL category, two voices sound at the same time.



# SFX Kit List

   The lowest key

		Voice No. 124	
		SFX Kit	
C1	C 1	Punch	
	C# 1	Laugh	
D1	D 1	Footsteps	
	D# 1	Scream	
E1	E 1	Handclap	
F1	F 1	Applause	
	F# 1	Question Setting	
G1	G 1	Announcement Start	
	G# 1	Correct	
A1	A 1	Announcement End	
	A# 1	Wrong	
B1	B 1	Gong 1	
C2	C 2	 Gong 2	
	C# 2	 Kick a can	
D2	D 2	 Spray	
	D# 2	 Camera	
E2	E 2	 Gear	
F2	F 2	 Bubble	
	F# 2	 Thunder	
G2	G 2	 Rain	
	G# 2	 Splash	
A2	A 2	 Wind	
	A# 2	 Stream	
B2	B 2	 Short Circuit	
C3	C 3	 Cat	
	C# 3	 Dog	
D3	D 3	 Cow	
	D# 3	 Horse	
E3	E 3	 Goat	

		Voice No. 124	
		SFX Kit	
F3	F 3	 Sheep	
	F# 3	 Lion	
G3	G 3	 Owl	
	G# 3	 Rooster	
A3	A 3	 Bird	
	A# 3	 Frog	
B3	B 3	 Insect	
C4	C 4	 Door Squeak	
	C# 4	 Door Slam	
D4	D 4	 Dial Tone	
	D# 4	 Alarm Bell	
E4	E 4	 Bicycle Horn	
F4	F 4	 Siren	
	F# 4	 Car Passing	
G4	G 4	 Railroad Crossing	
	G# 4	 Steam Engine Whistle	
A4	A 4	 Train	
	A# 4	 Helicopter	
B4	B 4	 Jet Plane	
C5	C 5	 UFO	
	C# 5	Car Engine Ignition	
D5	D 5	Car Horn	
	D# 5	Metallic Sound	
E5	E 5	Laser	
F5	F 5	Chime	
	F# 5	Cash register drawer	
G5	G 5	Barcode Scanner	
	G# 5	Zipper	
A5	A 5	Cuckoo Clock	
	A# 5	Clock Tick	
B5	B 5	Big Clock	
C6	C 6	Chau Gong	

# Style List

Style No.	Style Name
<b>POP &amp; ROCK</b>	
001	BritPopRock
002	8BeatModern
003	Cool8Beat
004	60sGuitarPop
005	8BeatAdria
006	60s8Beat
007	8Beat
008	OffBeat
009	60sRock
010	HardRock
011	RockShuffle
012	8BeatRock
013	16Beat
014	PopShuffle
015	GuitarPop
016	16BeatUptempo
017	KoolShuffle
018	HipHopLight
<b>BALLAD</b>	
019	70sGlamPiano
020	PianoBallad
021	LoveSong
022	6/8ModernEP
023	6/8SlowRock
024	OrganBallad
025	PopBallad
026	16BeatBallad
<b>DANCE</b>	
027	EuroTrance
028	Ibiza
029	SwingHouse
030	Clubdance
031	ClubLatin
032	Garage 1
033	Garage 2
034	TechnoParty
035	UKPop
036	HipHopGroove
037	HipShuffle
038	HipHopPop
039	70sDisco
040	LatinDisco
041	SaturdayNight
042	DiscoHands
<b>SWING &amp; JAZZ</b>	
043	BigBandFast
044	BigBandBallad
045	JazzClub
046	Swing 1
047	Swing 2
048	Five/Four

Style No.	Style Name
049	Dixieland
050	Ragtime
<b>R&amp;B</b>	
051	Soul
052	DetroitPop
053	6/8Soul
054	CrocoTwist
055	Rock&Roll
056	ComboBoogie
057	6/8Blues
<b>LATIN</b>	
058	BrazilianSamba
059	BossaNova
060	Forro
061	Sertanejo
062	Joropo
063	Parranda
064	Reggaeton
065	Tijuana
066	PasoDuranguense
067	CumbiaGrupera
068	Mambo
069	Salsa
070	Beguine
071	Reggae
<b>WORLD</b>	
072	CountryPop
073	CountrySwing
074	Country2/4
075	Bluegrass
076	Hawaiian
077	CelticDance
078	ScottishReel
079	Saeidy
080	WehdaSaghira
081	IranianElec
082	Emarati
083	AfricanGospelReggae
084	Makossa
085	ModernAfrobeat
086	HighLife
087	OrganHighLife
088	IgboHighLife
089	SocaCalypso
090	Azonto
091	IndianPop
092	Bhangra
093	Bhajan
094	BollyMix
095	Tamil
096	Kerala
097	GoanPop

Style No.	Style Name
098	Rajasthan
099	Dandiya
100	Qawwali
101	FolkHills
102	ModernDangdut 1
103	ModernDangdut 2
104	Keroncong
105	VietnamesePopBallad
106	Vietnamese6/8Ballad
107	XiQingLuoGu
108	YiZuMinGe
109	JingJuJieZou
<b>BALLROOM</b>	
110	VienneseWaltz
111	EnglishWaltz
112	Slowfox
113	Foxtrot
114	Quickstep
115	Tango
116	Pasodoble
117	Samba
118	ChaChaCha
119	Rumba
120	Jive
<b>TRAD. &amp; WALTZ</b>	
121	US March
122	6/8March
123	GermanMarch
124	PolkaPop
125	OberkrainerPolka
126	Tarantella
127	Showtune
128	ChristmasSwing
129	ChristmasWaltz
130	ItalianWaltz
131	SwingWaltz
132	JazzWaltz
133	CountryWaltz
134	OberkrainerWalzer
135	Musette
<b>PIANIST</b>	
136	Stride
137	PianoSwing
138	Arpeggio
139	Habanera
140	SlowRock
141	8BeatPianoBallad
142	6/8PianoMarch
143	PianoWaltz

# Song List

Song No.	Song Name
<b>TOP PICK</b>	
001	Demo 1
002	Demo 2
003	Demo 3
<b>TRADITIONAL</b>	
004	Frère Jacques
005	Der Froschgesang
006	Aura Lee
007	London Bridge
008	Sur le pont d'Avignon
009	Nedelka
010	Sippin' Cider Through a Straw
011	Bury Me Not on the Lone Prairie
012	Old MacDonald Had A Farm
013	If You're Happy and You Know It
014	Greensleeves
015	Kalinka
016	Holdilia Cook
017	La Cucaracha
<b>FAVORITE</b>	
018	Aloha Oe
019	Old Folks at Home
020	Santa Lucia
021	Beautiful Dreamer
022	Ring de Banjo
023	Funiculi Funicula
024	Largo (from the New World)
025	Brahms' Lullaby
026	Liebesträume Nr.3
027	Pomp and Circumstance
028	Chanson du Toreador
029	Jupiter, the Bringer of Jollity
030	The Polovetsian Dances
031	Die Moldau
032	Salut d'Amour op.12
033	Humoresques
034	Symphony No.9 (from the New World - 4th movement)
<b>INST. (INSTRUMENT) MASTER</b>	
035	Sicilienne/Fauré
036	Swan Lake
037	Grand March (Aida)
038	Serenade for Strings in C major, op.48
039	Pizzicato Polka
040	Romance de Amor
041	Menuett BWV Anh.114
042	Ave Verum Corpus
<b>DUET</b>	
043	Ten Little Indians (DUET)
044	The Cuckoo (DUET)
045	Close Your Hands, Open Your Hands (DUET)
046	O du lieber Augustin (DUET)

Song No.	Song Name
047	We Wish You A Merry Christmas (DUET)
048	London Bridge (DUET)
049	Scarborough Fair (DUET)
050	Twinkle Twinkle Little Star (DUET)
051	Im Mai (DUET)
052	O Christmas Tree (DUET)
053	Pop Goes The Weasel (DUET)
054	Mary Had a Little Lamb (DUET)
055	Row Row Row Your Boat (DUET)
056	On Top of Old Smoky (DUET)
<b>FAV. (FAVORITE) WITH STYLE</b>	
057	Amazing Grace
058	Oh! Susanna
059	Joy to the World
060	Little Brown Jug
061	Yankee Doodle
062	My Darling Clementine
063	Auld Lang Syne
064	My Bonnie
065	When the Saints Go Marching In
066	The Danube Waves
067	Battle Hymn of the Republic
068	I've Been Working On The Railroad
069	Grandfather's Clock
070	Bill Bailey (Won't You Please Come Home)
071	Down by the Riverside
072	Campdown Races
073	When Irish Eyes Are Smiling
074	Ave Maria
075	American Patrol
076	Valse Des Fleurs (From "The Nutcracker")
077	Frühlingsstimmen
<b>PIANO ENSEMBLE</b>	
078	Wenn ich ein Vöglein wär
079	Die Lorelei
080	Home Sweet Home
081	Scarborough Fair
082	My Old Kentucky Home
083	Loch Lomond
084	Silent Night
085	Deck the Halls
086	O Christmas Tree
087	Sonata Pathétique 2nd Adagio Cantabile
088	Ave Maria/J. S. Bach - Gounod
089	Jesus bleibet meine Freude
090	Prelude op.28-15 "Raindrop"
091	Nocturne op.9-2
092	Etude op.10-3 "Chanson de L'adieu"

Song No.	Song Name
093	Romanze (Serenade K.525)
<b>PIANO SOLO</b>	
094	Arabesque
095	La Chevaleresque
096	Für Elise
097	Turkish March
098	24 Preludes op.28-7
099	Annie Laurie
100	Jeanie with the Light Brown Hair

- Some Songs have been edited for length or for ease in learning, and may not be exactly the same as the original.
- A SONG BOOK (free downloadable scores) is available that includes scores for all built-in Songs (excepting Songs 1-3). To obtain the SONG BOOK, access the Yamaha Website below and download it from the product web page.

<https://www.yamaha.com/>

Next Page ➡

Song No.	Song Name
<b>Special Appendix - CHORD STUDY*</b>	
101–112	Chord Study 01–Chord Study 12
<b>USER SONG</b>	
113	User Song

\* You can hear and experience the sound of the chords used in a typical performance by playing back Song in this category. Song numbers 101 to 107 are very simple songs consisting of a single chord played in various positions, letting you listen to and master the chords one by one. On the other hand, Song numbers 108 to 112 consist of several chords strung together in patterns, for experiencing and understanding basic chord progressions.

## Effect Type List

### Reverb Types

No.	Reverb Type	Description
01–03	Hall 1–3	Concert hall reverb.
04–05	Room 1–2	Small room reverb.
06–07	Stage 1–2	Reverb for solo instruments.
08–09	Plate 1–2	Simulated steel plate reverb.
10	Off	No effect.

### Chorus Types

No.	Chorus Type	Description
1–3	Chorus 1–3	Conventional chorus program with rich, warm chorusing.
4–5	Flanger 1–2	This produces a rich, animated wavering effect in the sound.
6	Off	No effect.

#### **NOTE**

- The Reverb/Chorus types not included in the lists above may be called up as best-suited types when selecting some Songs or Styles.
- Selecting another Song or Style will reset the Reverb/Chorus type.

# Smart Chord Chart

Key Signature on the music score	Smart Chord Key (Display)	Root Note											
		D $\flat$			E $\flat$			F $\sharp$			G $\sharp$		
		C	D	E	F	G	A	B					
	FL7	C dim	D $\flat$ m D dim7	E $\flat$ 1+5	F dim	F $\sharp$ 7	G $\sharp$ m	A $\flat$ m7 $\flat$ 5	B				
	FL6	C dim	D $\flat$ 7	E $\flat$ m	F m7 $\flat$ 5	F $\sharp$	G dim	G $\sharp$ m	A dim7	B $\flat$ 1+5	B		
	FL5	C m7 $\flat$ 5	D $\flat$	E $\flat$ m	F 1+5	F $\sharp$	G dim	G $\sharp$ 7	A	B $\flat$ m	B		
	FL4	C 1+5	D $\flat$	E $\flat$ 7	F m	F $\sharp$	G m7 $\flat$ 5	G $\sharp$	A dim	B $\flat$ m	B dim7		
	FL3	C m	D $\flat$	E $\flat$	F m	F $\sharp$ dim7	G 1+5	G $\sharp$	A dim	B $\flat$ 7	B		
	FL2	C m	D $\flat$ dim7	E $\flat$	F 7	F $\sharp$	G m	G $\sharp$	A m7 $\flat$ 5	B $\flat$	B dim		
	FL1	C 7	D $\flat$	E $\flat$	F	F $\sharp$ dim	G m	G $\sharp$ dim7	A 1+5	B $\flat$	B dim		
No key signature 	SP0 (Default)	C	D $\flat$ dim	E $\flat$ dim7	F	F $\sharp$ dim	G 7	G $\sharp$	A m	B $\flat$	B m7 $\flat$ 5		
	SP1	C	D $\flat$ dim	E $\flat$	F	F $\sharp$ m7 $\flat$ 5	G	G $\sharp$ dim	A m	B $\flat$ dim7	B 1+5		
	SP2	C	D $\flat$ m7 $\flat$ 5	E $\flat$ dim	F dim7	F $\sharp$ 1+5	G	G $\sharp$ dim	A 7	B $\flat$	B m		
	SP3	C dim7	D $\flat$ 1+5	E $\flat$ dim	F	F $\sharp$ m	G	G $\sharp$ m7 $\flat$ 5	A	B $\flat$ dim	B m		
	SP4	C	D $\flat$ m	E $\flat$ m7 $\flat$ 5	F dim	F $\sharp$ m	G dim7	G $\sharp$ 1+5	A	B $\flat$ dim	B 7		
	SP5	C dim	D $\flat$ m	E $\flat$ 1+5	F dim	F $\sharp$ 7	G	G $\sharp$ m	A	B $\flat$ m7 $\flat$ 5	B		
	SP6	C dim	D $\flat$ 7	E $\flat$ m	F m7 $\flat$ 5	F $\sharp$	G dim	G $\sharp$ m	A dim7	B $\flat$ 1+5	B		
	SP7	C m7 $\flat$ 5	D $\flat$	E $\flat$ m	F 1+5	F $\sharp$	G dim	G $\sharp$ 7	A	B $\flat$ m	B		

## NOTE

- The "1+5" chord indication on the instrument's display is the same as that of a major chord.



## LIMITED 1-YEAR WARRANTY ON PORTABLE KEYBOARDS

**(NP, PSRE, PSREW, PSRF, PSRI, PSS, SHS, EZ, DGX230, DGX530,  
YPG AND YPT SERIES)**

Thank you for selecting a Yamaha product. Yamaha products are designed and manufactured to provide a high level of defect-free performance. Yamaha Corporation of America ("Yamaha") is proud of the experience and craftsmanship that goes into each and every Yamaha product. Yamaha sells its products through a network of reputable, specially authorized dealers and is pleased to offer you, the Original Owner, the following Limited Warranty, which applies only to products that have been (1) directly purchased from Yamaha's authorized dealers in the fifty states of the USA and District of Columbia (the "Warranted Area") and (2) used exclusively in the Warranted Area. Yamaha suggests that you read the Limited Warranty thoroughly and invites you to contact your authorized Yamaha dealer or Yamaha Customer Service if you have any questions.

**Coverage:** Yamaha will, at its option, repair or replace the product covered by this warranty if it becomes defective, malfunctions or otherwise fails to conform with this warranty under normal use and service during the term of this warranty, without charge for labor or materials. Repairs may be performed using new or refurbished parts that meet or exceed Yamaha specifications for new parts. If Yamaha elects to replace the product, the replacement may be a reconditioned unit. You will be responsible for any installation or removal charges and for any initial shipping charges if the product(s) must be shipped for warranty service. However, Yamaha will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty. This warranty does not cover (a) damage, deterioration or malfunction resulting from accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions according to the Owner's Manual for this product; any shipment of the product (claims must be presented to the carrier); repair or attempted repair by anyone other than Yamaha or an authorized Yamaha Service Center; (b) any unit which has been altered or on which the serial number has been defaced, modified or removed; (c) normal wear and any periodic maintenance; (d) deterioration due to perspiration, corrosive atmosphere or other external causes such as extremes in temperature or humidity; (e) damages attributable to power line surge or related electrical abnormalities, lightning damage or acts of God; or (f) RFI/EMI (Interference/noise) caused by improper grounding or the improper use of either certified or uncertified equipment, if applicable. Any evidence of alteration, erasing or forgery of proof-of-purchase documents will cause this warranty to be void. This warranty covers only the Original Owner and is not transferable.

**In Order to Obtain Warranty Service:** Warranty service will only be provided for defective products within the Warranted Area. Contact your local authorized Yamaha dealer who will advise you of the procedures to be followed. If this is not successful, contact Yamaha at the address, telephone number or website shown below. Yamaha may request that you send the defective product to a local authorized Yamaha Servicer or authorize return of the defective product to Yamaha for repair. If you are uncertain as to whether a dealer has been authorized by Yamaha, please contact Yamaha's Service Department at the number shown below, or check Yamaha's website at [www.Yamaha.com](http://www.Yamaha.com). Product(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, together with the original or a machine reproduction of the bill of sale or other dated, proof-of-purchase document describing the product, as evidence of warranty coverage. Should any product submitted for warranty service be found ineligible therefore, an estimate of repair cost will be furnished and the repair will be accomplished only if requested by you and upon receipt of payment or acceptable arrangement for payment.

**Limitation of Implied Warranties and Exclusion of Damages:** ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE APPLICABLE PERIOD OF TIME SET FORTH ABOVE. YAMAHA SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE OR INTERRUPTION OF PERFORMANCES OR ANY CONSEQUENCES. YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT YAMAHA'S OPTION. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is the only express warranty applicable to the product specified herein; Yamaha neither assumes nor authorizes anyone to assume for it any other express warranty.

If you have any questions about service received or if you need assistance in locating an authorized Yamaha Servicer, please contact:



**CUSTOMER SERVICE**

Yamaha Corporation of America

6600 Orangethorpe Avenue, Buena Park, California 90620-1373

Telephone: 800-854-1569

[www.yamaha.com](http://www.yamaha.com)

**Do not return any product to the above address without a written Return Authorization issued by YAMAHA.**

© 2020 Yamaha Corporation of America.

# Important Notice: Guarantee Information for customers in EEA\* and Switzerland

English	
<b>Important Notice: Guarantee Information for customers in EEA* and Switzerland</b> For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area	
<b>Wichtiger Hinweis: Garantie-Information für Kunden in der EWR* und der Schweiz</b> Für näheres Garantie-Information über dieses Produkt von Yamaha, sowie über den Pan-EEA* und Schweizer Garantieservice, besuchen Sie bitte entweder die folgend angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Webseite), oder wenden Sie sich an den für Ihr Land zuständigen Wirtschaftsraum	<b>Deutsch</b>
<b>Remarque importante: Informations de garantie pour les clients de l'EEE* et la Suisse</b> Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement Yamaha dans votre pays de résidence. * EEE : Espace Economique Européen	<b>Français</b>
<b>Belangrijke mededeling: Garantie-informatie voor klanten in de EER* en Zwitserland</b> Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantieservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vindt een afdrukbaar bestand op onze website) of neemt u contact op met de verenigendöriging van Yamaha in uw land. * EER: Europees Economisch Ruimte	<b>Nederlands</b>
<b>Aviso importante: Información sobre la garantía para los clientes del EEE* y Suiza</b> Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la siguiente página web (encontrará el archivo imprimible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. * EEE: Espacio Económico Europeo	<b>Español</b>
<b>Avviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA* e in Svizzera</b> Per informazioni dettagliate sulla garanzia relativa a questo prodotto Yamaha e l'assistenza in garanzia nei paesi EEA* e in Svizzera, potete consultare il sito Web all'indirizzo riportato di seguito (è disponibile il file in formato stampabile) oppure contattate l'ufficio di rappresentanza locale della Yamaha. * EEA: Area Economica Europea	<b>Italiano</b>
<b>Aviso importante: Informações sobre as garantias para clientes da AEE* e da Suíça</b> Para obter uma informação pormenorizada sobre este produto da Yamaha e sobre o serviço de garantia na AEE* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contato com o escritório de representação da Yamaha no seu país. * AEE: Área Económica Europeia	<b>Português</b>
<b>Σημαντική Σημείωση: Πληροφορίες εγγύησης για τους πελάτες στον ΕΟΧ* και Ελβετία</b> Για λεπτομερείς πληροφορίες εγγύησης σχετικά με το παρόν προϊόν της Yamaha και την κάλυψη εγγύησης σε όλο το χώρο του ΕΟΧ* και την Ελβετία, επισκεφτείτε την τοποθεσία ιστοσελίδας (Εκτυπώσιμο αρχείο είναι διαθέσιμο στην κεντρική μας) ή απευθυνθείτε αντίστοιχως στη Yamaha στο χώρο σας. * ΕΟΧ: Ευρωπαϊκός Οικονομικός Χώρος.	<b>Ελληνικά</b>
<b>Viktigt: Garantiinformasjon for kunder i EES-området* och Sveits</b> För detaljerad information om denna Yamaha-produkt samt garantiservice i hela EES-området* och Sveits kan du antingen besöka nedanstående webbadress (en skrivstänglig fil finns på webbplatsen) eller kontakta Yamahas officiella representant i ditt land. * EES: Europeiska Ekonomiska Samarbetsområdet	<b>Svenska</b>
<b>Viktig merknad: Garantiinformasjon for kunder i EØS* og Sveits</b> Detaljert informasjon om dette Yamaha-produktet og garantiservice for hele EØS-området* og Sveits kan fås enten ved å besøke nettstedens nettsider (skriftversjonen finnes på våre nettsider) eller kontakte Yamahas kontoret i landet der du bor. *EØS: Det europeiske økonomiske samarbeidsområdet	<b>Norsk</b>
<b>Viktig oplysning: Garantioplysninger til kunder i EØO* og Schweiz</b> De kan finde detaljerede garantioplysninger om dette Yamaha-produkt og den fælles garantitjenesteordning for EØO* (og Schweiz) ved at besøge det webside, der er angivet nedenfor (der findes en fil, som kan udskrives, på vores webside), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor De bor. * EØO: Det Europæiske Økonomiske Samarbejds Område	<b>Dansk</b>

<b>Finland</b> Tärkeä ilmoitus: Takuutiedot Euroopan talousalueen (ETA*) ja Sveitsin asiakkaille Täsmällisen takuutiedon saamiseksi ETA-alueen ja Sveitsin takuuta koskevat yksityiskohtaiset tiedot saatte alla olevasta netiosoitteesta. (Tästä löydät myös saatavissa sivustadamme). Voit myös ottaa yhteyttä paikalliseen Yamahan edustajaan. ETA: Euroopan talousalue	<b>Suomi</b>
<b>Poland</b> Ważne: Ważne informacje o gwarancji w EOG* i Szwajcarii Aby dowiedzieć się więcej na temat warunków gwarancji tego produktu firmy Yamaha i serwisu gwarancyjnego w całym EOG* i Szwajcarii, należy odwiedzić wskazaną stronę internetową (plik gotowy do wydruku znajduje się na naszej stronie internetowej). Można skontaktować się z przedstawicielstwem firmy Yamaha w swoim kraju. * EOG – Europejski Obszar Gospodarczy	<b>Polski</b>
<b>Czech</b> Důležité oznámení: Záruční informace pro zákazníky v EHS* a ve Švýcarsku Podrobné záruční informace o tomto produktu Yamaha a záručním servisu v celém EHS* a ve Švýcarsku naleznete na níže uvedené webové adrese (soubor k tisku je dostupný na našich webových stránkách) nebo se můžete obrátit na zastupující firmu Yamaha ve své zemi. * EHS: Evropský hospodářský prostor	<b>Česky</b>
<b>Hungary</b> Fontos figyelmeztetés: Garancia-információk az EGT* területén és Svájcban élő vásárlók számára A jelen Yamaha termékre vonatkozó részletes garancia-információk, valamint az EGT*-re és Svájcra kiterjedő garanciális szolgáltatás tekintetében keresse fel webhelyünket az alábbi címen (a webhelyen nyomtatható fájl is talál), vagy pedig lépjen kapcsolatba az országában működő Yamahával képviselői ártalával. * EGT: Európai Gazdasági Térség	<b>Magyar</b>
<b>Eston</b> Oluline märkus: Garantitavade Euroopa Majanduspiirkonna (EMP*) ja Šveitsi klientidele Täpsemat teabes saamiseks selle Yamahat toote garantii ning Kagu Euroopa Majanduspiirkonna ja Šveitsi garantiteeninduse kohta, külastage meie saidi (meie saidil on sadaval printida fail) või pöörduge Teie regioon / Eestis esinduse poole. * EMP: Euroopa Majanduspiirkond	<b>Eesti keel</b>
<b>Latvia</b> Svarīgi paziņojums: garantijas informācija klientiem EEZ* un Šveicā Lai saņemtu detalizētu garantijas informāciju par šo Yamaha produktu, kā arī garantijas apakšosānu EEZ* un Šveicā, lūdzam apmeklētjem zīmāk norādīto tīmekļa vietnes adresi (tīmekļa vietnē ir pieejams drukājams fails) vai sazināties ar jūsu valstī apkalpojošo Yamahā pārstāvniecību. * EEZ: Eiropas Ekonomikas zona	<b>Latviešu</b>
<b>Lithuania</b> Dėmesio: Informacija dėl garantijos pirkėjams EEE* ir Šveicarijoje Jei reikia išsamios informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE* ir Šveicarijoje, apsilankykite mūsų svetainėje toliau nurodytoje adresu (svetainėje yra spausdinamas failas) arba kreipkitės į „Yamaha“ atstovą savo šalyje. *EEE – Europos ekonominė erdvė	<b>Lietuvių kalba</b>
<b>Slovakia</b> Dôležité upozornenie: Informácie o záruke pre zákazníkov v EHP* a Švajčiarsku Podrobné informácie o zariadení týkajúce sa tohto produktu od spoločnosti Yamaha a garancijnom servise v EHP* a Švajčiarsku nájdete na webovej stránke uvedenej nižšie (na našej webovej stránke je k dispozícii súbor na tlač) alebo sa obráťte na zastupujúcu spoločnosť Yamaha vo svojej krajine. * EHP: Európsky hospodársky priestor	<b>Slovensčina</b>
<b>Slovenia</b> Pomembno obvestilo: Informacije o garanciji za kupce v EGP* in Švici Za podrobnejše informacije o tem Yamahinih izdelkih ter garancijskem servisu v celotnem EGP in Švici, obiščite spletno mesto, ki je navedeno spodaj (našljajva datoteka je na voljo na našem spletnem mestu), ali se obrnite na Yamahinega predstavnika v svoji državi. * EGP: Evropski gospodarski prostor	<b>Slovenščina</b>
<b>Bulgaria</b> Важно съобщение: Информация за гаранцията за клиенти в ЕМП* и Швейцария За подробна информация за гаранцията за този продукт на Yamaha и гаранционното обслужване в панаевропейската зона на ЕМП* и Швейцария, или посетете посочената по-долу сайт (на нашия уеб сайт има файл за печат), или се свържете с представителния офис на Yamaha във вашата страна. * ЕМП: Европейско икономическо пространство	<b>Български език</b>
<b>Romania</b> Notificare importantă: Informații despre garanție pentru clienții din SEE* și Elveția Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE* și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați brokerul reprezentanței Yamaha din țara dumneavoastră. * SEE: Spațiul Economic European	<b>Limba română</b>

<http://europe.yamaha.com/warranty/>

## NORTH AMERICA

### CANADA

**Yamaha Canada Music Ltd.**  
135 Milner Avenue, Toronto, Ontario M1S 3R1,  
Canada  
Tel: +1-416-298-1311

### U.S.A.

**Yamaha Corporation of America**  
6600 Orangethorpe Avenue, Buena Park, CA 90620,  
U.S.A.  
Tel: +1-714-522-9011

## CENTRAL & SOUTH AMERICA

### MEXICO

**Yamaha de México, S.A. de C.V.**  
Av. Insurgentes Sur 1647 Piso 9, Col. San José  
Insurgentes, Delegación Benito Juárez, México,  
D.F., C.P. 03900, México  
Tel: +52-55-5804-0600

### BRAZIL

**Yamaha Musical do Brasil Ltda.**  
Rua Fidêncio Ramos, 302 – Cj 52 e 54 – Torre B –  
Vila Olímpia – CEP 04551-010 – São Paulo/SP,  
Brazil  
Tel: +55-11-3704-1377

### ARGENTINA

**Yamaha Music Latin America, S.A.,  
Sucursal Argentina**  
Olga Cossetini 1553, Piso 4 Norte,  
Madero Este-C1107CEK,  
Buenos Aires, Argentina  
Tel: +54-11-4119-7000

### PANAMA AND OTHER LATIN

### AMERICAN COUNTRIES/

### CARIBBEAN COUNTRIES

**Yamaha Music Latin America, S.A.**  
Edificio Torre Daviendia, Piso: 20  
Avenida Balboa, Marbella, Corregimiento de Bella  
Vista, Ciudad de Panamá, Rep. de Panamá  
Tel: +507-269-5311

## EUROPE

### THE UNITED KINGDOM/IRELAND

**Yamaha Music Europe GmbH (UK)**  
Sherbourne Drive, Tilbrook, Milton Keynes,  
MK7 8BL, U.K.  
Tel: +44-1908-366700

### GERMANY

**Yamaha Music Europe GmbH**  
Siemensstrasse 22-34, 25462 Rellingen, Germany  
Tel: +49-4101-303-40

### SWITZERLAND/LIECHTENSTEIN

**Yamaha Music Europe GmbH, Branch  
Switzerland in Thalwil**  
Seestrasse 18a, 8800 Thalwil, Switzerland  
Tel: +41-44-3878080

### AUSTRIA/CROATIA/CZECH REPUBLIC/

### HUNGARY/ROMANIA/SLOVAKIA/

### SLOVENIA

**Yamaha Music Europe GmbH, Branch Austria**  
Schlegelgasse 20, 1100 Wien, Austria  
Tel: +43-1-60203900

### POLAND

**Yamaha Music Europe GmbH**  
Sp.z o.o. Oddział w Polsce  
ul. Wielicka 52, 02-657 Warszawa, Poland  
Tel: +48-22-880-08-88

### BULGARIA

**Dinacord Bulgaria LTD.**  
Bul. Iskarsko Schose 7 Targowski Zentar Ewropa  
1528 Sofia, Bulgaria  
Tel: +359-2-978-20-25

### MALTA

**Olimpus Music Ltd.**  
Valletta Road, Mosta MST9010, Malta  
Tel: +356-2133-2093

### NETHERLANDS/BELGIUM/

### LUXEMBOURG

**Yamaha Music Europe, Branch Benelux**  
Clarissenhof 5b, 4133 AB Vianen, The Netherlands  
Tel: +31-347-358040

### FRANCE

**Yamaha Music Europe**  
7 rue Ambroise Croizat, Zone d'activités de Pariest,  
77183 Croissy-Baubourg, France  
Tel: +33-1-6461-4000

### ITALY

**Yamaha Music Europe GmbH, Branch Italy**  
Via Tinelli N.67/69 20855 Gerno di Lesmo (MB),  
Italy  
Tel: +39-039-9065-1

### SPAIN/PORTUGAL

**Yamaha Music Europe GmbH Ibérica, Sucursal  
en España**  
Cra. de la Coruña km. 17,200, 28231  
Las Rozas de Madrid, Spain  
Tel: +34-91-639-88-88

### GREECE

**Philippos Nakas S.A. The Music House**  
19th km. Leof. Lavriou 190 02 Peania – Attiki,  
Greece  
Tel: +30-210-6686260

### SWEDEN

**Yamaha Music Europe GmbH Germany filial  
Scandinavia**  
JA Wettergrensgata 1, 400 43 Göteborg, Sweden  
Tel: +46-31-89-34-00

### DENMARK

**Yamaha Music Denmark,  
Filial of Yamaha Music Europe GmbH, Tyskland**  
Generatorvej 8C, ST. TH., 2860 Søborg, Denmark  
Tel: +45-44-92-49-00

### FINLAND

**F-Musikkit Oy**  
Antaksentie 4  
FI-01510 Vantaa, Finland  
Tel: +358 (0)96185111

### NORWAY

**Yamaha Music Europe GmbH Germany -  
Norwegian Branch**  
Grini Næringspark 1, 1332 Østerås, Norway  
Tel: +47-6716-7800

### ICELAND

**Hljóðfaeruhúsið Ehf.**  
Síðumula 20  
IS-108 Reykjavík, Iceland  
Tel: +354-525-5050

### CYPRUS

**Nakas Music Cyprus Ltd.**  
Nikis Ave 2k  
1086 Nicosia  
Tel: +357-22-511080  
**Major Music Center**  
21 Ali Riza Ave. Ortakoy  
P.O.Box 475 Lefkosia, Cyprus  
Tel: (392) 227 9213

### RUSSIA

**Yamaha Music (Russia) LLC.**  
Room 37, entrance 7, bld. 7, Kievskaya street,  
Moscow, 121059, Russia  
Tel: +7-495-626-5005

### OTHER EUROPEAN COUNTRIES

**Yamaha Music Europe GmbH**  
Siemensstrasse 22-34, 25462 Rellingen, Germany  
Tel: +49-4101-303-40

## AFRICA

**Yamaha Music Gulf FZE**  
JAFZA-16, Office 512, P.O.Box 17328,  
Jebel Ali FZE, Dubai, UAE  
Tel: +971-4-801-1500

## MIDDLE EAST

### TURKEY

**Yamaha Music Europe GmbH**  
Merkezi Almanya Türkiye İstanbul Şubesi  
Mor Sumbul Sokak Varyap Meridian Business  
1 Blok No:1 113-114-115  
Bati Ataschir Istanbul, Turkey  
Tel: +90-216-275-7960

### ISRAEL

**RBX International Co., Ltd.**  
P.O.Box 10245, Petach-Tikva, 49002  
Tel: (972) 3-925-6900

### OTHER COUNTRIES

**Yamaha Music Gulf FZE**  
JAFZA-16, Office 512, P.O.Box 17328,  
Jebel Ali FZE, Dubai, UAE  
Tel: +971-4-801-1500

## ASIA

### THE PEOPLE'S REPUBLIC OF CHINA

**Yamaha Music & Electronics (China) Co., Ltd.**  
2F, Yunhedasha, 1818 Xinzha-lu, Jingan-qu,  
Shanghai, China  
Tel: +86-400-051-7700

### HONG KONG

**Tom Lee Music Co., Ltd.**  
11/F., Silvercord Tower 1, 30 Canton Road,  
Tsimshatsui, Kowloon, Hong Kong  
Tel: +852-2737-7688

### INDIA

**Yamaha Music India Private Limited**  
P-401, JMD Megapolis, Sector-48, Sohna Road,  
Gurgaon-120118, Haryana, India  
Tel: +91-124-485-3300

### INDONESIA

**PT. Yamaha Musik Indonesia (Distributor)**  
Yamaha Music Center Bldg. Jalan Jend. Gatot  
Subroto Kav. 4, Jakarta 12930, Indonesia  
Tel: +62-21-520-2577

### KOREA

**Yamaha Music Korea Ltd.**  
11F, Prudential Tower, 298, Gangnam-daero,  
Gangnam-gu, Seoul, 06253, Korea  
Tel: +82-2-3467-3300

### MALAYSIA

**Yamaha Music (Malaysia) Sdn. Bhd.**  
No.8, Jalan Perbandaran, Kelana Jaya, 47301  
Petaling Jaya, Selangor, Malaysia  
Tel: +60-3-78030900

### SINGAPORE

**Yamaha Music (Asia) Private Limited**  
Block 202 Houghton Street 21, #02-00,  
Singapore 350022, Singapore  
Tel: +65-6740-9200

### TAIWAN

**Yamaha Music & Electronics Taiwan Co., Ltd.**  
2F., No.1, Yuanrong Rd., Banqiao Dist.,  
New Taipei City 22063, Taiwan (R.O.C.)  
Tel: +886-2-7741-8888

### THAILAND

**Siam Music Yamaha Co., Ltd.**  
3, 4, 15, 16th Fl., Siam Motors Building,  
891/1 Rama 1 Road, Wangmai,  
Pathumwan, Bangkok 10330, Thailand  
Tel: +66-2-215-2622

### VIETNAM

**Yamaha Music Vietnam Company Limited**  
15th Floor, Nam A Bank Tower, 201-203 Cach  
Mang Thang Tam St., Ward 4, Dist.3,  
Ho Chi Minh City, Vietnam  
Tel: +84-28-3818-1122

### OTHER ASIAN COUNTRIES

[https://asia-latinamerica-mea.yamaha.com/  
index.html](https://asia-latinamerica-mea.yamaha.com/index.html)

## OCEANIA

### AUSTRALIA

**Yamaha Music Australia Pty. Ltd.**  
Level 1, 80 Market Street, South Melbourne,  
VIC 3205 Australia  
Tel: +61-3-9693-5111

### NEW ZEALAND

**Music Works LTD**  
P.O.BOX 6246 Wellesley, Auckland 4680,  
New Zealand  
Tel: +64-9-634-0099

### COUNTRIES AND TRUST

### TERRITORIES IN PACIFIC OCEAN

[https://asia-latinamerica-mea.yamaha.com/  
index.html](https://asia-latinamerica-mea.yamaha.com/index.html)